



integration with integrity

User's Manual

1U Butterfly Backplane 1108250

Version 1.0 ,

---

---

## **Copyrights**

This manual is copyrighted and all rights are reserved. It does not allow any non authorization in copied, photocopied, translated or reproduced to any electronic or machine readable form in whole or in part without prior written consent from the manufacturer.

In general, the manufacturer will not be liable for any direct, indirect, special, incidental or consequential damages arising from the use of inability to use the product or documentation, even if advised of the possibility of such damages. The manufacturer keeps the rights in the subject to change the contents of this manual without prior notices in order to improve the function design, performance, quality and reliability. The author assumes no responsibility for any errors or omissions, which may appear in this manual, nor does it make a commitment to update the information contained herein.

## **Trademarks**


Intel is a registered trademark of Intel Corporation.

Award is a registered trademark of Award Software, Inc.

All other trademarks, products and or product's name mentioned herein are mentioned for identification purposes only, and may be trademarks and/or registered trademarks of their respective companies or owners.

---

### 1. USB1, USB2 External USB Connector

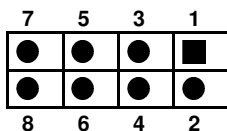

	DESCRIPTION	PIN NO.	DESCRIPTION
1	USBVCC	2	GND
3	DATA-	4	DATA+
5	DATA+	6	DATA-
7	GND	8	USBVCC

### 2. FAN1 : Fan Connector



 
PIN NO.	DESCRIPTION
1	GND
2	+12V
3	NC

### 3. ATXCTL1 : Backplane to Mainboard Connector



PIN NO.	DESCRIPTION
1	GND
2	PSON#
3	5VSB


### 4. 12V1 : +12 POWER Connector



PIN	DESCRIPTION	PIN	DESCRIPTION
1	GND	2	GND
3	+12V	4	+12V

## 5. PWR1 : ATX Power Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	GND	15	GND
4	+5V	16	PSON#
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	PWRGD	20	NC
9	+5VSB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	GND

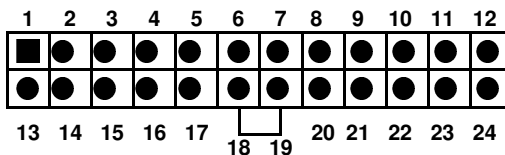

## 6.PWRBTN : Power on Button



PIN NO.	DESCRIPTION
1	GND
2	PWRBT#

## 7. RESET : Reset Button



PIN NO.	DESCRIPTION
1	GND
2	SHB_RST#

## 8. PWRGD : Power Good Connector



 
PIN NO.	DESCRIPTION
1	GND
2	PWRGD

## 9. SM-BUS : System Management BUS Connector



PIN NO.	DESCRIPTION
1	SMDAT
2	SMCLK


## 10. CN1 : PCIE X16 SDVO Control Signal Pin




PIN NO.	DESCRIPTION
1	EXP_EN
2	SDVO_CLK
3	SDVO_DAT

## 11. IOPWR : I/O Power Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	-12V
3	+12V	4	GND
5	IPMB_DA	6	5VSB
7	GND	8	GND
9	IPMB_CL	10	5VSB
11	+5V	12	PWRGD
13	SMDAT	14	SHB_RST#
15	5VSB	16	GND
17	SMCLK	18	PSON#
19	+3.3V	20	PWRBT#

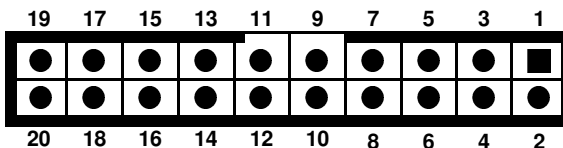

## 12. Dimension:

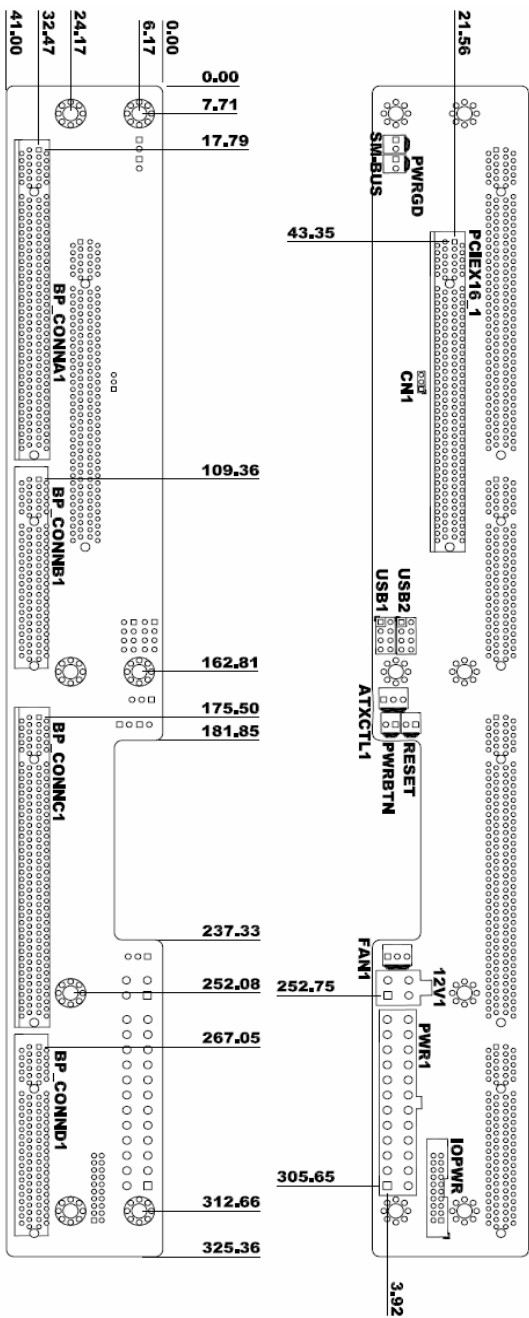

---

Any advice or comments about our products and service, or anything we can help you with please don't hesitate to contact us. We will do our best to support your products, projects and business.



Address: Global American, Inc.  
17 Hampshire Drive  
Hudson, NH 03051

Telephone: Toll Free (U.S. Only) 800-833-8999  
(603)886-3900

FAX: (603)886-4545

Website: <http://www.globalamericaninc.com>  
Support: Technical Support at Global American

