



integration with integrity

User's Manual

5 1/4" Embedded Controller 3308040

Version 1.0, August 2006

Copyrights

This manual is copyrighted and all rights are reserved. It does not allow any non authorization in copied, photocopied, translated or reproduced to any electronic or machine readable form in whole or in part without prior written consent from the manufacturer.

In general, the manufacturer will not be liable for any direct, indirect, special, incidental or consequential damages arising from the use of inability to use the product or documentation, even if advised of the possibility of such damages. The manufacturer keeps the rights in the subject to change the contents of this manual without prior notices in order to improve the function design, performance, quality and reliability. The author assumes no responsibility for any errors or omissions, which may appear in this manual, nor does it make a commitment to update the information contained herein.

Trademarks

Intel is a registered trademark of Intel Corporation.

Award is a registered trademark of Award Software, Inc.

All other trademarks, products and or product's name mentioned herein are mentioned for identification purposes only, and may be trademarks and/or registered trademarks of their respective companies or owners.

Table of Contents

1	INTRODUCTION.....	13
1.1	3308040 OVERVIEW	14
1.1.1	<i>3308040 Models</i>	14
1.1.2	<i>3308040 Applications</i>	14
1.1.3	<i>3308040 Benefits</i>	15
1.1.4	<i>3308040 Features</i>	15
1.2	3308040 OVERVIEW	16
1.2.1	<i>3308040 Connectors</i>	17
1.2.2	<i>Technical Specifications</i>	18
2	DETAILED SPECIFICATIONS	21
2.1	OVERVIEW	22
2.2	BOARD DIMENSIONS	22
2.2.1	<i>CPU Support</i>	23
2.2.2	<i>Supported Pentium® M CPUs</i>	23
2.2.3	<i>Supported Celeron® M CPUs</i>	24
2.3	ONBOARD CHIPSETS	25
2.3.1	<i>Northbridge and Southbridge Chipsets</i>	25
2.3.2	<i>Intel® 852GM Northbridge Chipset</i>	25
2.3.3	<i>Intel® ICH4 Southbridge Chipset</i>	26
2.4	DATA FLOW	26
2.5	GRAPHICS SUPPORT	28
2.6	MEMORY SUPPORT	29
2.7	PCI BUS INTERFACE SUPPORT	29
2.8	GbE ETHERNET	29
2.9	DRIVE INTERFACES	30
2.9.1	<i>SATA Drives</i>	30
2.9.2	<i>IDE HDD Interfaces</i>	30
2.9.3	<i>Floppy Disk Drive (FDD)</i>	30
2.9.4	<i>CompactFlash Support</i>	31
2.11	REAL TIME CLOCK	31

2.12 SYSTEM MONITORING.....	31
2.13 INFRARED DATA ASSOCIATION (IRDA) INTERFACE.....	31
2.14 USB INTERFACES.....	32
2.15 BIOS	32
2.16 OPERATING TEMPERATURE AND TEMPERATURE CONTROL.....	32
2.17 AUDIO CODEC.....	32
2.18 POWER CONSUMPTION.....	34
2.19 PACKAGED CONTENTS AND OPTIONAL ACCESSORY ITEMS.....	34
2.19.1 Package Contents.....	34
2.19.2 Optional Accessory Items.....	35
3 CONNECTORS AND JUMPERS	37
3.1 PERIPHERAL INTERFACE CONNECTORS	38
3.1.1 3308040 Layout.....	38
3.1.2 Peripheral Interface Connectors	39
3.1.3 Rear Panel Connectors.....	41
3.1.4 Onboard Jumpers.....	41
3.2 INTERNAL PERIPHERAL CONNECTORS.....	41
3.2.1 Power Connector	42
3.2.2 ATX PS_ON Connector.....	43
3.2.3 Audio Connector	44
3.2.4 CompactFlash Connector.....	45
3.2.5 Digital Input/Output (DIO) Connector.....	46
3.2.6 Digital Visual Interface (DVI) Connector.....	48
3.2.7 Fan Connector	49
3.2.8 Floppy Disk Connector.....	50
3.2.9 Front Panel Connector	52
3.2.10 IDE Connector (Primary).....	53
3.2.11 IDE Connector (Secondary).....	55
3.2.12 Inverter Power Connector	56
3.2.13 IR Interface Connector	57
3.2.14 Keyboard/Mouse Connector	59
3.2.15 LCD LVDS Connector	60
3.2.16 Parallel Port Connector	62
3.2.17 RS-232 Serial Port Connectors.....	63
3.2.18 RS-232/422/485 Serial Port Connector.....	64

3.2.19 SATA Drive Connectors	66
3.2.20 Internal USB Connectors.....	67
3.2.21 VGA Connector (Internal)	68
3.3 EXTERNAL (REAR PANEL) CONNECTORS	69
3.3.1 LAN Connectors.....	69
3.4 ONBOARD JUMPERS	71
3.4.1 Clear CMOS Jumper.....	72
3.4.2 CF Card Setup	73
3.4.3 LCD Voltage Setup Jumper.....	75
3.4.4 COM4 Setup Jumper (RS-232/422/485).....	76
4 INSTALLATION AND CONFIGURATION	79
4.1 ANTI-STATIC PRECAUTIONS.....	80
4.2 INSTALLATION CONSIDERATIONS	80
4.2.1 Installation Notices	80
4.3 UNPACKING.....	81
4.3.1 Unpacking Precautions.....	81
4.3.2 Checklist.....	82
4.4 3308040 MOTHERBOARD INSTALLATION.....	82
4.4.1 CPU Installation	84
4.4.2 Cooling Kit (CF-479B-RS) Installation	86
4.4.3 DIMM Module Installation.....	88
4.4.3.1 Purchasing the Memory Module.....	88
4.4.3.2 DIMM Module Installation.....	88
4.4.4 Peripheral Device Connection.....	89
4.4.4.1 IDE Disk Drive Connector (IDE1)	90
4.5 CHASSIS INSTALLATION	90
4.6 REAR PANEL CONNECTORS	91
4.6.1 Ethernet Connection	91
A WATCHDOG TIMER.....	93
B ADDRESS MAPPING.....	97
C EXTERNAL AC'97 AUDIO CODEC.....	101
D RAID SETUP.....	107

THIS PAGE IS INTENTIONALLY LEFT BLANK

List of Figures

Figure 1-1: 3308040 Overview	16
Figure 1-2: 3308040 Solder Side Overview	16
Figure 2-1: 3308040 Dimension (mm)	22
Figure 2-2: Data Flow Block Diagram.....	27
Figure 3-1: Connector and Jumper Locations	38
Figure 3-2: Connector and Jumper Locations (Solder Side).....	39
Figure 3-3: Power Connector Location	42
Figure 3-4: ATX PS_ON Connector Location	43
Figure 3-5: Audio Connector Location.....	44
Figure 3-6: CompactFlash Connector Location.....	45
Figure 3-7: DIO Connector Connector Locations	47
Figure 3-8: DVI Connector Location.....	48
Figure 3-9: Fan Connector Location	50
Figure 3-10: FDD Connector Location	51
Figure 3-11: Front Panel Connector Locations.....	52
Figure 3-12: Primary IDE Device Connector Locations.....	54
Figure 3-13: Secondary IDE Device Connector Locations.....	55
Figure 3-14: Inverter Connector Locations	57
Figure 3-15: IR Connector Pinout Locations.....	58
Figure 3-16: Keyboard/Mouse Connector Location.....	59
Figure 3-17: LVDS Connector Locations	61
Figure 3-18: Parallel Port Connector Location.....	62
Figure 3-19: RS-232 Serial Port Connector Locations	63
Figure 3-20: RS-232/422/485 Serial Port Connector Location	65
Figure 3-21: SATA Drive Connector Locations.....	66
Figure 3-22: USB Connector Pinout Locations.....	67
Figure 3-23: VGA Connector Location.....	68
Figure 3-24: 3308040 Rear Panel.....	69
Figure 3-25: RJ-45 Ethernet Connector	70

Figure 3-26: CLR_CMOS Pinout Locations73

Figure 3-27: JP5 Pinout Locations74

Figure 3-28: JP3 Pinout Locations76

Figure 3-29: COM4 Setup Jumper Pinout Locations77

Figure 4-1: Make sure the CPU socket retention screw is unlocked84

Figure 4-2: Lock the CPU Socket Retention Screw85

Figure 4-3: GAI 2107703 Cooling Kit86

Figure 4-4: Cooling Kit Support Bracket.....87

Figure 4-5: Connect the cooling fan cable87

Figure 4-6: DIMM Module Installation.....89

List of Tables

Table 1-1: 3308040 Model Specifications	14
Table 1-2: Technical Specifications	18
Table 2-1: Supported Pentium® M CPUs	23
Table 2-2: Supported Celeron® M CPUs.....	24
Table 2-3: Power Consumption	34
Table 3-1: Peripheral Interface Connectors.....	39
Table 3-2: Rear Panel Connectors.....	41
Table 3-3: Onboard Jumpers	41
Table 3-4: Power Connector Pinouts	43
Table 3-5: ATX PS_ON Connector Pinouts.....	44
Table 3-6: Audio Connector Pinouts	45
Table 3-7: CompactFlash Connector Pinouts	46
Table 3-8: DIO Connector Connector Pinouts.....	47
Table 3-9: DVI Connector Connector Pinouts	48
Table 3-10: Fan Connector Pinouts.....	50
Table 3-11: FDD Connector Pinouts.....	51
Table 3-12: Front Panel Connector Pinouts	53
Table 3-13: Primary IDE Connector Pinouts.....	54
Table 3-14: Secondary IDE Connector Pinouts.....	55
Table 3-15: Inverter Power Connector Pinouts	57
Table 3-16: IR Connector Pinouts.....	58
Table 3-17: Keyboard/Mouse Connector Pinouts	60
Table 3-18: LCD LVDS Connector Pinouts	61
Table 3-19: Parallel Port Connector Pinouts	63
Table 3-20: RS-232 Serial Port Connector Pinouts.....	64
Table 3-21: RS-232/RS-422/RS-485 Serial Port Connector Pinouts	65
Table 3-22: SATA Drive Connector Pinouts	66
Table 3-23: USB Port Connector Pinouts	68
Table 3-24: VGA Connector Pinouts	69

Table 3-25: LAN Pinouts	70
Table 3-26: RJ-45 Ethernet Connector LEDs.....	70
Table 3-27: Jumpers.....	71
Table 3-28: Clear CMOS Jumper Settings	72
Table 3-29: CF Card Setup Jumper Settings	74
Table 3-30: JP3 Jumper Settings.....	75
Table 3-31: COM4 Setup Jumper Settings.....	76
Table 4-1: GAI Provided Cables.....	89

Glossary

AC '97	Audio Codec 97	HDD	Hard Disk Drive
ACPI	Advanced Configuration and Power Interface	IDE	Integrated Data Electronics
APM	Advanced Power Management	I/O	Input/Output
ARMD	ATAPI Removable Media Device	ICH4	I/O Controller Hub 4
ASKIR	Shift Keyed Infrared	L1 Cache	Level 1 Cache
ATA	Advanced Technology Attachments	L2 Cache	Level 2 Cache
BIOS	Basic Input/Output System	LCD	Liquid Crystal Display
CFII	CompactFlash Type 2	LPT	Parallel Port Connector
CMOS	Complementary Metal Oxide Semiconductor	LVDS	Low Voltage Differential Signaling
CPU	Central Processing Unit	MAC	Media Access Controller
Codec	Compressor/Decompressor	OS	Operating System
COM	Serial Port	PCI	Peripheral Connect Interface
DAC	Digital to Analog Converter	PIO	Programmed Input Output
DDR	Double Data Rate	PnP	Plug and Play
DIMM	Dual Inline Memory Module	POST	Power On Self Test
DIO	Digital Input/Output	RAM	Random Access Memory
DMA	Direct Memory Access	SATA	Serial ATA
EIDE	Enhanced IDE	S.M.A.R.T	Self Monitoring Analysis and Reporting Technology
EIST	Enhanced Intel SpeedStep Technology	SPD	Serial Presence Detect
FDD	Floppy Disk Drive	S/PDI	Sony/Philips Digital Interface
FDC	Floppy Disk Connector	SDRAM	Synchronous Dynamic Random Access Memory
FFIO	Flexible File Input/Output	SIR	Serial Infrared
FIFO	First In/First Out	UART	Universal Asynchronous Receiver-transmitter
FSB	Front Side Bus	USB	Universal Serial Bus
IrDA	Infrared Data Association	VGA	Video Graphics Adapter

THIS PAGE IS INTENTIONALLY LEFT BLANK

Chapter

1

Introduction

1.1 3308040 Overview

The 5.25" 3308040 socket 479 Pentium M and Celeron M single board computer (SBC) is fully equipped with advanced multi-mode I/Os. The 3308040 is designed for system manufacturers, integrators, and VARs that want performance, reliability, and quality at a reasonable price.

1.1.1 3308040 Models

The 3308040 series has eight models:

- 3308040A
- 3308040B
- 3308040C
- 3308040D
- 3308040E
- 3308040F
- 3308040G
- 3308040H

The specifications for the four models are show in **Table 1-1**.

3308040	A	B	C	D	E	F
Onboard CPU	NO	CM600Z	CM1GZ	NO	CM600Z	CM1GZ
CRT/LCD	YES	YES	YES	YES	YES	YES
Dual GbE	YES	YES	YES	YES	YES	YES
SATA	YES	YES	YES	YES	YES	YES
Audio	YES	YES	YES	YES	YES	YES
DVI Function	NO	NO	NO	YES	YES	YES

Table 1-1: 3308040 Model Specifications

CM600Z : Intel Celeron M 600MHz / zero cache CPU

CM1GZ : Intel Celeron M 1GMHz / zero cache CPU

1.1.2 3308040 Applications

The 3308040 is designed for applications in the following areas:

- Industrial PC applications
- Human Machine Interface (HMI) applications
- Marine, GPS and transportation applications
- Financial, retail and kiosk applications

1.1.3 3308040 Benefits

Some of the 3308040 benefits include:

- Low power, high performance
- Flexible dual display options
- Multiple storage option integration including
 - 40 Pin IFM or 3.5" HDD (hard disk drive)
 - 44 Pin IFM or 2.5" HDD (hard disk drive)
 - Dual SATA ports with RAID 0 and RAID 1 support
 - CFII (CompactFlash) support
 - Floppy disk drive (FDD) support
- Mini PCI
- SATA RAID support

1.1.4 3308040 Features

Some of the 3308040 features are listed below:

- 5.25" form factor
- RoHS compliant
- Socket 479 Intel® Pentium M/Celeron M processors supported
- Dual-independent display functionality
- Maximum front side bus (FSB) speed up to 400MHz supported
- Up to 2GB of 266MHz of DDR memory supported
- Two high performance gigabit Ethernet (GbE) controllers onboard
- Two SATA channels with transfer rates up to 150MB/s onboard
- Six USB 2.0 devices onboard
- Integrated audio

1.2 3308040 Overview

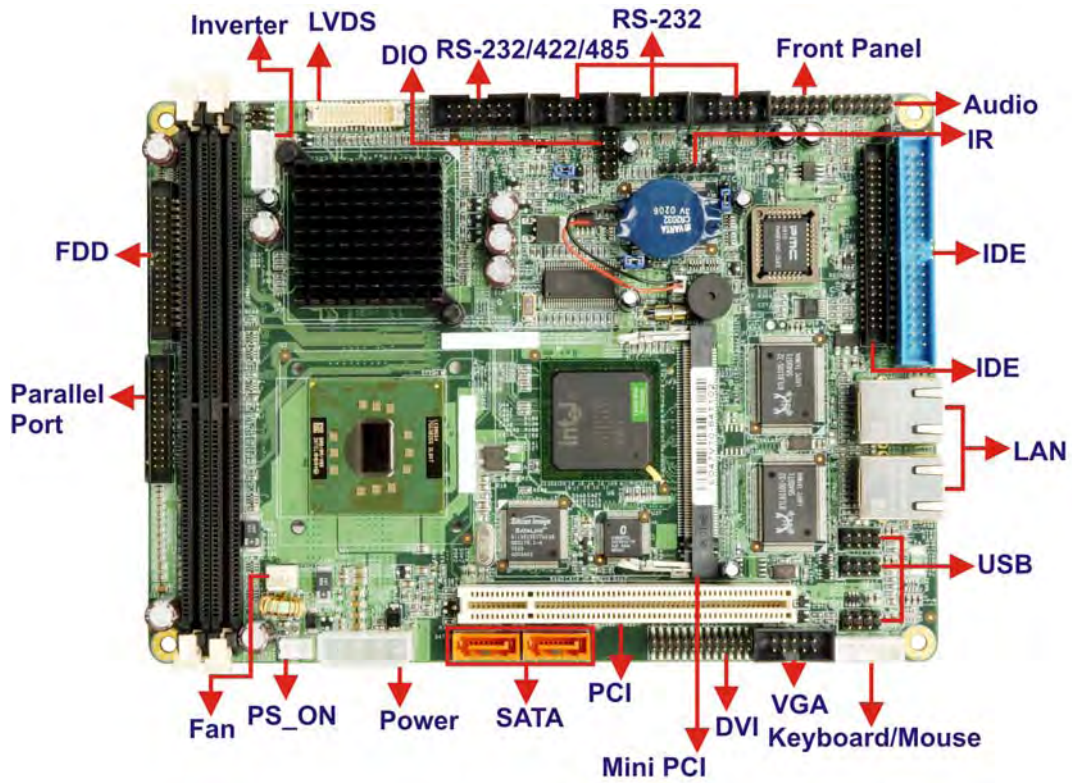


Figure 1-1: 3308040 Overview



Figure 1-2: 3308040 Solder Side Overview

1.2.1 3308040 Connectors

The 3308040 has the following connectors onboard:

- 1 x Power connector
- 1 x PS_ON power connector
- 1 x Audio connector
- 1 x CompactFlash (CF) connector (solder side)
- 1 x Digital input/output connector
- 1 x DVI connector
- 1 x Fan connector
- 1 x Floppy disk connector
- 1 x Front panel connector
- 2 x IDE Interface connectors (40-pin and 44-pin)
- 1 x Inverter power connector
- 1 x IR interface connector
- 1 x Keyboard/mouse connector
- 1 x LCD LVDS interface connector
- 1 x PCI slot
- 1 x Parallel port connector
- 1 x RS-232/422/485 serial port connector
- 3 x RS-232 serial port connectors
- 2 x SATA connectors
- 3 x USB connectors
- 1 x VGA connector
- 2 x 184-pin DIMM sockets

The 3308040 has the following connectors on the board rear panel:

- 2 x Ethernet connectors

The 3308040 has the following onboard jumpers:

- Clear CMOS
- CF card setup

1.2.2 Technical Specifications

3308040 technical specifications are listed in **Table 1-2**. Detailed descriptions of each specification can be found in **Chapter 2 Detailed Specifications**.

Specification	3308040
Form Factor	5.25" form factor
CPU	Intel socket 479 Pentium M (up to 2.1 GHz) Intel socket 479 Celeron M (up to 1.7 GHz)
Northbridge Chipset	Intel 852GM
Southbridge Chipset	ICH4
Display	Intel Extreme Graphics 2 (integrated into Northbridge)
Memory	Supports two 1GB DDR266 184-pin DIMM modules
BIOS	AMI BIOS Label
SSD	CompactFlash (CF)
Super I/O	W83627HG
Audio	Realtek ALC655 AC'97 Codec
LAN	Dual RTL8110SC
COM	3 x RS-232C 1 x RS-232/422/485
USB2.0	3 x USB 1.1 or 2.0 onboard connectors support two devices each
IDE	1 x 40-pin IDE connects to two Ultra ATA33/66/100 devices 1 x 44-pin IDE connects to two Ultra ATA33/66/100 devices
Parallel Port	1 x LPT port connector
SATA	2 x SATA connectors with transfer rates up to 150MB/sec

KB/MS	PS/2 connector
WDT	Software programmable 1-255 sec. by super I/O
IrDA	SIR / ASKIR
Digital I/O	4 input / 4 output by super I/O
Fan connector	1x3 pin for CPU Fan
Expansion	1x mini PCI slot 1 x PCI slot
Power	+5V/+12V, AT/ATX support
Temperature	0°C - 60°C
Humidity	5%~95% non-condensing
Dimensions	146.05mm x 203.2mm
Weight (GW/NW)	1000g/400g

Table 1-2: Technical Specifications

THIS PAGE IS INTENTIONALLY LEFT BLANK

Chapter

2

Detailed Specifications

2.1 Overview

This chapter describes the specifications and onboard features of the N3308040 in detail.

2.2 Board Dimensions

The dimensions of the board are listed below:

- **Length:** 203.2mm
- **Width:** 146.05mm

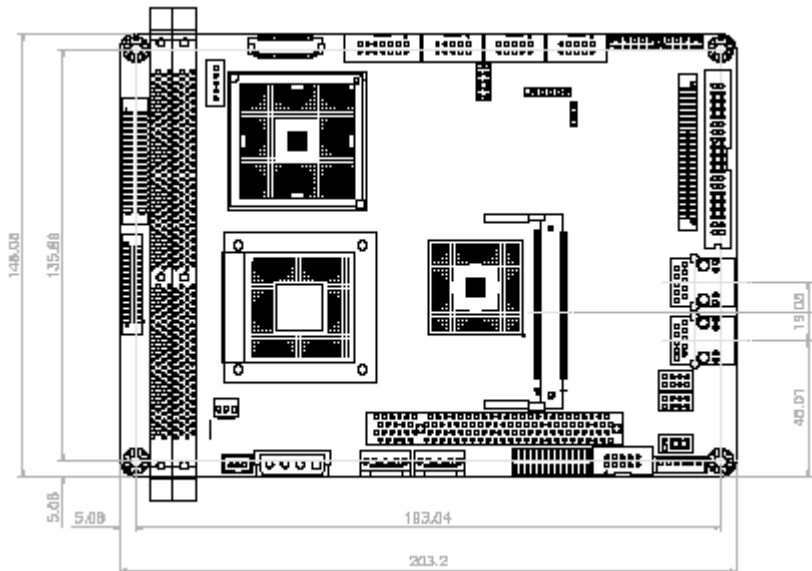


Figure 2-1: 3308040 Dimension (mm)

2.2.1 CPU Support



NOTE:

The 3308040B and the 3308040E have a preinstalled zero cache Intel Celeron M 600MHz on board.

The 3308040C and the 3308040F have a preinstalled zero cache Intel Celeron M 1GMHz on board.

The 3308040 supports normal voltage, low voltage (LV) and ultra low voltage (ULV) mobile (M) Intel® Pentium® M processors and Intel® Celeron® M processors

2.2.2 Supported Pentium® M CPUs

Table 2-1 lists the Intel® Pentium® M processors supported by the 3308040 CPU board. All the Intel® Pentium® M processors support Enhanced Intel SpeedStep® Technology.

Processor Number	Power	Architecture	L2 Cache	Speed	FSB	Execute Disable Bit
778	LV	90nm	2MB	1.60GHz	400MHz	Yes
765	Normal	90nm	2MB	2.10GHz	400MHz	No
758	LV	90nm	2MB	1.50GHz	400MHz	Yes
755	Normal	90nm	2MB	2GHz	400MHz	No
753	ULV	90nm	2MB	1.20GHz	400MHz	Yes
745	Normal	90nm	2MB	1.80GHz	400MHz	No
738	LV	90nm	2MB	1.40GHz	400MHz	No
735	Normal	90nm	2MB	1.70GHz	400MHz	No
733J	ULV	90nm	2MB	1.10GHz	400MHz	Yes
733	ULV	90nm	2MB	1.10GHz	400MHz	No

725	ULV	90nm	2MB	1.60GHz	400MHz	No
723	ULV	90nm	2MB	1GHz	400MHz	No
718	LV	130nm	1MB	1.30GHz	400MHz	No

Table 2-1: Supported Pentium® M CPUs

2.2.3 Supported Celeron® M CPUs

Table 2-2 lists the Intel® Celeron® M processors supported by the 3308040 CPU board.

Processor Number	Power	Architecture	L2 Cache	Speed	FSB	Execute Disable Bit
390	Normal	90nm	1MB	1.70GHz	400MHz	Yes
383	ULV	90nm	1MB	1GHz	400MHz	Yes
380	Normal	90nm	1MB	1.60GHz	400MHz	Yes
373	ULV	90nm	512KB	1GHz	400MHz	Yes
370	Normal	90nm	1MB	1.50GHz	400MHz	Yes
360J	Normal	90nm	1MB	1.40GHz	400MHz	Yes
360	Normal	90nm	1MB	1.40GHz	400MHz	No
353	ULV	90nm	512KB	900MHz	400MHz	No
350J	Normal	90nm	1MB	1.30GHz	400MHz	Yes
350	Normal	90nm	1MB	1.30GHz	400MHz	No
340	Normal	130nm	512KB	1.50GHz	400MHz	No
333	ULV	130nm	512KB	900MHz	400MHz	No
330	Normal	130nm	512KB	1.40GHz	400MHz	No
320	Normal	130nm	512KB	1.30GHz	400MHz	No
310	Normal	130nm	512KB	1.20GHz	400MHz	No

Table 2-2: Supported Celeron® M CPUs

2.3 Onboard Chipsets

2.3.1 Northbridge and Southbridge Chipsets

The following chipsets are preinstalled on the board:

- **Northbridge:** Intel® 852GM
- **Southbridge:** Intel® ICH4

The following two sections (**Section 2.3.2** and **Section 2.3.3**) list some of the features of the Intel® 852GM and the Intel® ICH4 chipsets. For more information on these two chipsets please refer to the Intel website.

2.3.2 Intel® 852GM Northbridge Chipset

The Intel 852GM northbridge chipset comes with the following features:

- The Intel 852GM chipset is designed, validated, and optimized for the Mobile Intel Celeron processor and Intel Celeron processor with Intel® NetBurst® micro-architecture
- 400 MHz system bus delivers a high-bandwidth connection between the processor and the platform
- Supports integrated graphics utilizing Intel® Extreme Graphics 2 technology
- Advanced packaging technology and industry leading electrical design innovations deliver long-term system reliability over wide operating conditions
- Three USB host controllers provide high performance peripherals with 480 Mbps of bandwidth, while enabling support for up to six USB 2.0 ports.
- The on-chip AC '97 implementation delivers 20-bit audio for enhanced sound quality and full surround-sound capability.
- LAN Connect Interface (LCI) provides flexible network solutions such as 10/100 Mbps Ethernet and 10/100 Mbps Ethernet with LAN manageability
- Dual Ultra ATA/100 controllers, coupled with the Intel® Application Accelerator – a performance software package – support faster IDE transfers to storage devices
- Intel Application Accelerator software provides additional performance over native ATA drivers by improving I/O transfer rates and enabling faster O/S load time, resulting in accelerated boot times

-
- Communication and Network Riser (CNR) offers flexibility in system configuration with a baseline feature set that can be upgraded with an audio card, modem card, or network card
 - Embedded lifecycle support
 - Integrated graphics

2.3.3 Intel® ICH4 Southbridge Chipset

The ICH4 southbridge chipset comes with the following features, functions and capabilities:

- PCI Local Bus Specification, Revision 2.2-compliant with support for 33 MHz PCI operations.
- PCI slots (supports up to 6 Req/Gnt pairs)
- ACPI Power Management Logic Support
- Enhanced DMA controller, Interrupt controller, and timer functions
- Integrated IDE controller supports Ultra ATA100/66/33
- USB host interface with support for 6 USB ports; 3 UHCI host controllers; 1 EHCI high-speed USB 2.0 Host controller
- Integrated LAN controller
- System Management Bus (SMBus) Specification, Version 2.0 with additional support for I²C devices
- Supports Audio Codec '97, Revision 2.3 specification (a.k.a., AC '97 Component Specification, Revision 2.3) Link for Audio and Telephony codecs (up to seven channels)
- Low Pin Count (LPC) interface
- Firmware Hub (FWH) interface support
- Alert On LAN* (AOL) and Alert On LAN 2* (AOL2)

2.4 Data Flow

Figure 2-2 shows the data flow between the two onboard chipsets and other components installed on the motherboard and described in the following sections of this chapter.

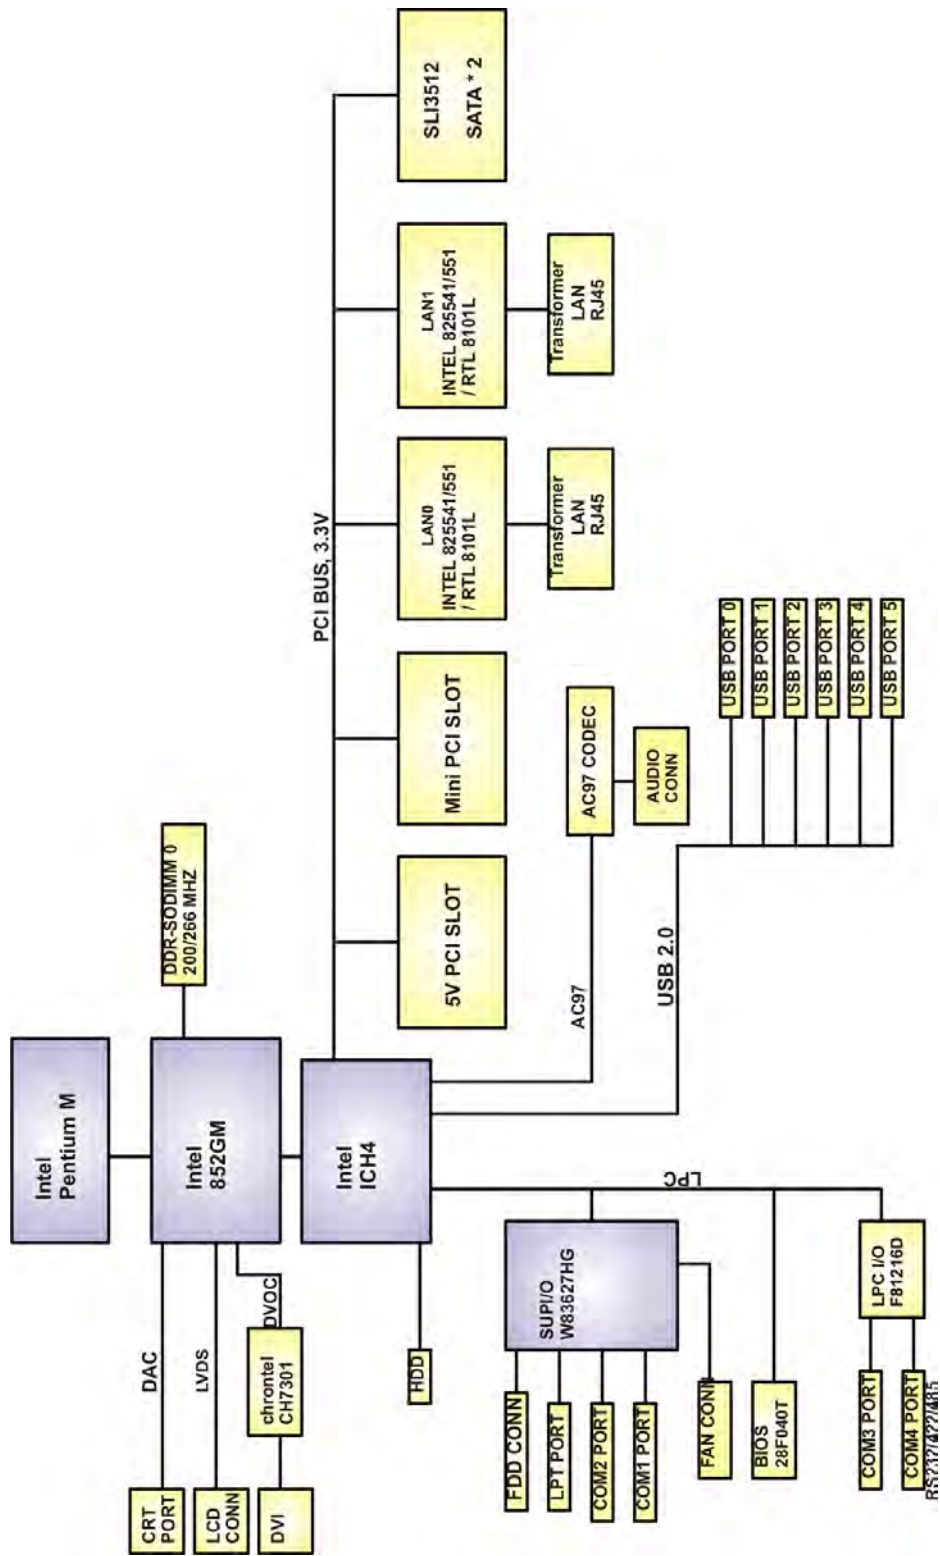


Figure 2-2: Data Flow Block Diagram

2.5 Graphics Support

Features of the Intel Extreme Graphics 2 technology integrated on the Intel 852GM northbridge chipset are listed below.

- **Enhanced 2D 256-bit internal path:**
 - 8/16/32bpp
 - DirectDraw*, GDI, GDI+
 - Anti-aliased text support
 - Alpha blending
 - Alphas stretch blitter
 - Hardware alpha blended RGB cursor
 - Color space conversion
 - 5x2 overlay support
 - Rotate, scale and translate operations
- **High-performance 3D 256-bit internal path:**
 - 32bpp/ 24ZorW/ 8 Stencil
 - DX7*/DX8*/OGL*1.1
 - DXTn texture compression
 - Up to 4 textures / pixel on a single pass
 - Cubic reflection map
 - Embossed/DOT3 bump mapping
 - Multi-texture
 - DOT3 bump-mapping
 - Point sprites
- **Video and Display DirectShow*/DirectVA*:**
 - Hardware motion compensation support for DVD playback
 - 4x2 overlay filter
 - 350 MHz DAC frequency
 - Maximum DVO pixel rate of up to 330MP/s
 - Flat panel monitors and TV-out support via AGP Digital Display (ADD) cards
 - 350 MHz DAC for 1800x1440 @ 85Hz max CRT resolution or 2048x1536@60Hz max FP resolution
 - Synchronous display for dual monitor capabilities
 - 350MHz RAMDAC for up to QXGA analog monitor support

- Dual DVO ports for up to QXGA digital display support
- Multiple display types (LVDS, DVI, TV-out, CRT)

2.6 Memory Support

The 3308040 has two 184-pin dual inline memory module (DIMM) sockets and supports up to two un-buffered DDR DIMMs with the following specifications:

- **Maximum RAM:** 2GB (1GB module in each slot)
- **DIMM Transfer Rates:** 266MHz

2.7 PCI Bus Interface Support

The PCI bus on the 3308040 has the following features:

- 33MHz Revision 2.2 is implemented
- Maximum throughput: 133MB/sec
- One PCI REQ/GNT pair can be given higher arbitration priority (intended for external 1394 host controller)

2.8 GbE Ethernet

The 3308040 has two RTL8110SC GbE Ethernet controllers onboard. The technical features of these controllers are listed below.

- Integrated 10/100/1000 transceiver
- Auto-Negotiation with Next page capability
- Supports PCI 2.3, 32bit, 33/66MHz
- Supports pair swap/polarity/skew correction
- Crossover Detection & Auto-Correction
- Wake-on-LAN and remote wake-up support
- Microsoft® NDIS5 Checksum Offload (IP, TCP, UDP) and largesend offload support
- Supports Full Duplex flow control (IEEE 802.3x)
- Fully compliant with IEEE 802.3, IEEE 802.3u, IEEE 802.3ab
- Supports IEEE 802.1Q VLAN tagging
- Serial EEPROM
- 3.3V signaling, 5V PCI I/O tolerant

-
- Transmit/Receive FIFO (8K/64K) support
 - Supports power down/link down power saving

2.9 Drive Interfaces

The 3308040 can support the following drive interfaces.

- 2 x SATA drives
- 4 x IDE devices
- 1 x FDD
- 1 x CFII card

2.9.1 SATA Drives

The 3308040 supports two, first generation SATA drives with transfer rates of up to 150MB/s

2.9.2 IDE HDD Interfaces

The 3308040 southbridge chipset IDE controller supports up to two HDDs with the following specifications:

- Supports PIO IDE transfers up to 16MB/s
- Supports the following Ultra ATA devices:
 - **Ultra ATA/100**, with data transfer rates up to 100MB/s
 - **Ultra ATA/66**, with data transfer rates up to 66MB/s
 - **Ultra ATA/33**, with data transfer rates up to 33MB/s

2.9.3 Floppy Disk Drive (FDD)

The 3308040 supports a single FDD. The following FDD formats are compatible with the board.

- 5.25": 360KB and 1.2MB
- 3.5": 720KB, 1.44MB and 2.88MB

2.9.4 CompactFlash Support

Standard CFII cards can be inserted into the CompactFlash slot on the solder side of the 3308040 PCB.

2.10 Serial Ports

The 3308040 has four high-speed UART serial ports, configured as COM1, COM2, COM3 and COM4. The serial ports have the following specifications.

- 16C550 UART with 16-byte FIFO buffer
- 115.2Kbps transmission rate

COM4 can be configured as RS-232, RS-422 or RS-485. COM2 can also be configured as an infrared interface.

2.11 Real Time Clock

256-byte battery backed CMOS RAM

2.12 System Monitoring

The 3308040 is capable of self-monitoring various aspects of its operating status including:

- CPU, chipset, and battery voltage, +3.3V, +5V, and +12V
- RPM of cooling fans
- CPU and board temperatures (by the corresponding embedded sensors)

2.13 Infrared Data Association (IrDA) Interface

The 3308040 IrDA supports the following interfaces.

- Serial Infrared (SIR)
- Shift Keyed Infrared (ASKIR)

If an IrDA port is need, COM2 must be configured as either SIR or ASKIR mode in the BIOS under **Super IO devices**. Normal RS-232 COM 2 is then disabled.

2.14 USB Interfaces

The 3308040 has six USB interfaces support USB 2.0.

2.15 BIOS

The 3308040 uses a licensed copy of AMI BIOS. The features of the flash BIOS used are listed below:

- SMIBIOS (DMI) compliant
- Console redirection function support
- PXE (Pre-Boot Execution Environment) support
- USB booting support

2.16 Operating Temperature and Temperature Control

The maximum and minimum operating temperatures for the 3308040 are listed below.

- Minimum Operating Temperature: 0°C (32°F)
- Maximum Operating Temperature: 60°C (140°F)

A cooling fan and heat sink must be installed on the CPU. Thermal paste must be smeared on the lower side of the heat sink before it is mounted on the CPU. Heat sinks are also mounted on the northbridge and southbridge chipsets to ensure the operating temperature of these chips remain low.

2.17 Audio Codec

The 3308040 has an integrated REALTEK ALC655 CODEC. The ALC655 CODEC is a 16-bit, full-duplex AC'97 Rev. 2.3 compatible six-channel audio CODEC designed for PC multimedia systems, including host/soft audio and AMR/CNR-based designs. Some of the features of the codec are listed below.

- Meets performance requirements for audio on PC99/2001 systems
- Meets Microsoft WHQL/WLP 2.0 audio requirements
- 16-bit Stereo full-duplex CODEC with 48KHz sampling rate
- Compliant with AC'97 Rev 2.3 specifications

- Front-Out, Surround-Out, MIC-In and LINE-In Jack Sensing
- 14.318MHz -> 24.576MHz PLL to eliminate crystal
- 12.288MHz BITCLK input
- Integrated PCBEEP generator to save buzzer
- Interrupt capability
- Three analog line-level stereo inputs with 5-bit volume control, LINE_IN, CD, AUX
- High-quality differential CD input
- Two analog line-level mono inputs: PCBEEP, PHONE-IN
- Two software selectable MIC inputs
- Dedicated Front-MIC input for front panel applications (software selectable)
- Boost preamplifier for MIC input
- LINE input shared with surround output; MIC input shared with Center and LFE output
- Built-in 50mW/20ohm amplifier for both Front-out and Surround-Out
- External Amplifier Power Down (EAPD) capability
- Power management and enhanced power saving features
- Supports Power-Off CD function
- Adjustable VREFOUT control
- Supports 48KHz S/PDIF output, complying with AC'97 Rev 2.3 specifications
- Supports 32K/44.1K/48KHz S/PDIF input
- Power support: Digital: 3.3V; Analog: 3.3V/5V
- Standard 48-pin LQFP package
- EAX™ 1.0 & 2.0 compatible
- Direct Sound 3D™ compatible
- A3D™ compatible
- I3DL2 compatible
- HRTF 3D positional audio
- 10-band software equalizer
- Voice cancellation and key shifting in Karaoke mode
- AVRack® Media Player
- Configuration Panel for improved user convenience

2.18 Power Consumption

Table 2-3 shows the power consumption parameters for the 3308040 when a Celeron M processor with a clock speed of 1.6GHz and a FSB 400MHz is running with two 512MB DDR266 modules. (under WinXP, 3D Mark 2003)

Voltage	Current
+5V	4.10A
+12V	2.36A

Table 2-3: Power Consumption

2.19 Packaged Contents and Optional Accessory Items

2.19.1 Package Contents

The 3308040 is shipped with the following components.

- 1x 3308040 single board computer
- 1 x IDE flat cable 40P/40P/40P
- 1 x 2.54 pitch KB/PS2 mouse cable
- 2 x SATA cable
- 1 x SATA power cable
- 1 x audio cable
- 1 x VGA cable
- 3 x 2.54 pitch RS-232 cables (without brackets)
- 1 x RS-232/422/485 cable (without bracket)
- 1x 2.54 pitch USB cable (without bracket)
- 1 x Mini jumper pack
- 1x Utility CD
- 1x Quick Installation Guide

2.19.2 Optional Accessory Items

The items shown in the list below are optional accessory items are purchased separately.

- CPU cooler
- FDD cable
- LPT cable
- ATX power cable

THIS PAGE IS INTENTIONALLY LEFT BLANK

Chapter

3

Connectors and Jumpers

3.1 Peripheral Interface Connectors

Section 3.1.1 shows peripheral interface connector locations. Section 3.1.2 lists all the peripheral interface connectors seen in Section 3.1.1.

3.1.1 3308040 Layout

Figure 3-1 shows the onboard peripheral connectors, rear panel peripheral connectors and onboard jumpers.

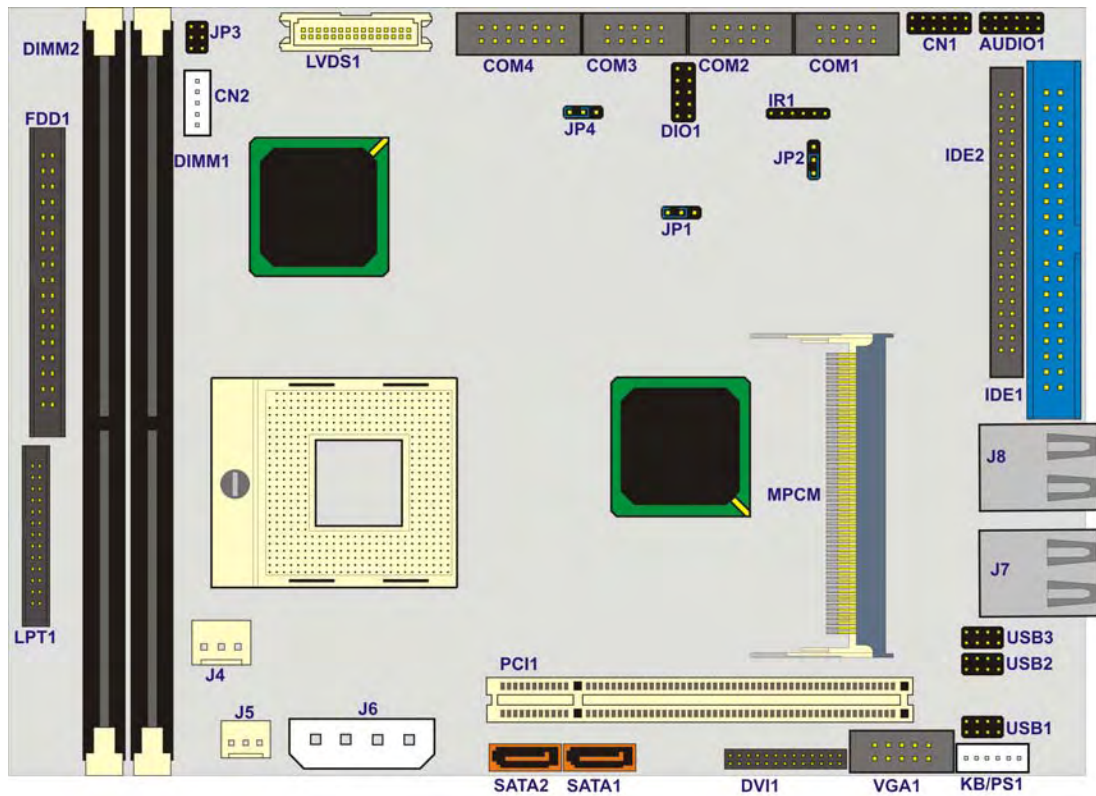


Figure 3-1: Connector and Jumper Locations

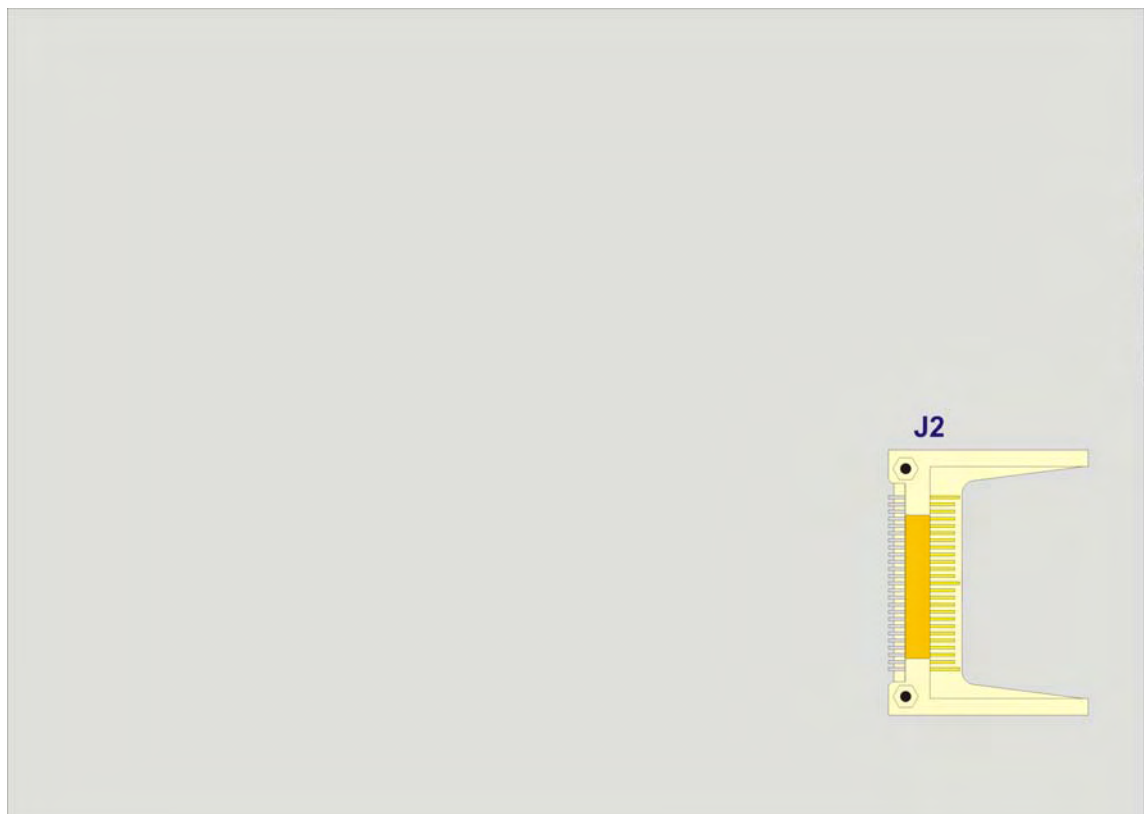


Figure 3-2: Connector and Jumper Locations (Solder Side)

3.1.2 Peripheral Interface Connectors

Table 3-1 shows a list of the peripheral interface connectors on the 3308040.

Detailed descriptions of these connectors can be found in **Section 3.2** on **page 41**.

Connector	Type	Label
Power connector	4-pin header	J6
PS_ON connector	3-pin header	J5
Audio connector	12-pin header	AUDIO1
CompactFlash (CF) connector	50-pin header	J2
Digital Input/Output Connector	10-pin header	DIO1
Digital video interface (DVI) connector	26-pin header	DV11

Fan connector	3-pin header	J4
Floppy Disk connector	34-pin header	FDD1
Front Panel connector	12-pin header	CN1
IDE Interface connector (Primary)	40-pin header	IDE1
IDE Interface connector (Secondary)	44-pin header	IDE2
Inverter Power connector	5-pin header	CN2
IR Interface connector	5-pin header	IR1
Keyboard/Mouse connector	6-pin header	KB/PS1
LVDS interface connector	30-pin header	LVDS1
Parallel port connector	26-pin header	LPT1
PCI slot	120-pin PCI slot	PCI1
Mini PCI connector	124-pin connector	MPCI1
RS-232 serial port connector	10-pin header	COM1
RS-232 serial port connector	10-pin header	COM2
RS-232 serial port connector	10-pin header	COM3
RS-232/422/485 serial port connector	14-pin header	COM4
SATA drive connector (150MB/s)	7-pin SATA connector	SATA1
SATA drive connector (150MB/s)	7-pin SATA connector	SATA2
USB connector (USB 1.1 and USB 2.0)	8-pin header	USB1
USB connector (USB 1.1 and USB 2.0)	8-pin header	USB2
USB connector (USB 1.1 and USB 2.0)	8-pin header	USB3
VGA connector	10-pin header	VGA1

Table 3-1: Peripheral Interface Connectors

3.1.3 Rear Panel Connectors

Table 3-2 lists the rear panel connectors on the 3308040. Detailed descriptions of these connectors can be found in Section 3.3 on page 71.

Connector	Type	Label
Ethernet connector	RJ-45	J7
Ethernet connector	RJ-45	J8

Table 3-2: Rear Panel Connectors

3.1.4 Onboard Jumpers

Table 3-3 lists the onboard jumpers. Detailed descriptions of these jumpers can be found in **Section 3.3.1** on page 71.

Description	Label	Type
Clear CMOS	JP1	3-pin header
CF card setup	JP2	3-pin header
LCD LVDS voltage setup	JP3	6-pin header
COM4 setup (RS-232/485)	JP4	3-pin header

Table 3-3: Onboard Jumpers

3.2 Internal Peripheral Connectors

Internal peripheral connectors are found on the motherboard and are only accessible when the motherboard is outside of the chassis. This section has complete descriptions of all the internal, peripheral connectors on the 3308040.

3.2.1 Power Connector

- CN Label:** J6
- CN Type:** 4-pin power connector (1x4)
- CN Location:** See **Figure 3-3**
- CN Pinouts:** See **Table 3-4**

The Power connector is connected to an AT power source that powers the system.

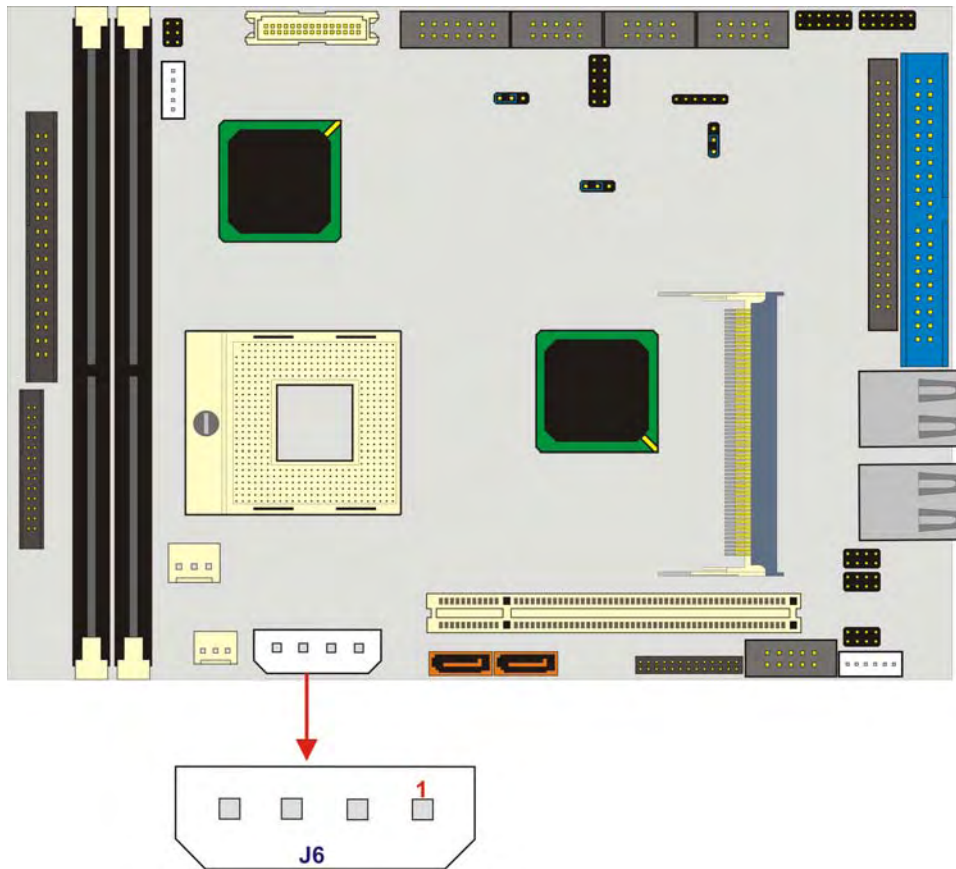


Figure 3-3: Power Connector Location

PIN NO.	DESCRIPTION
1	+5V
2	GND
3	GND
4	+12V

Table 3-4: Power Connector Pinouts

3.2.2 ATX PS_ON Connector

- CN Label:** J5
- CN Type:** 3-pin header (1x3)
- CN Location:** See Figure 3-4
- CN Pinouts:** See Table 3-5

The ATX PS_ON connector (J5) connects to an ATX power supply.

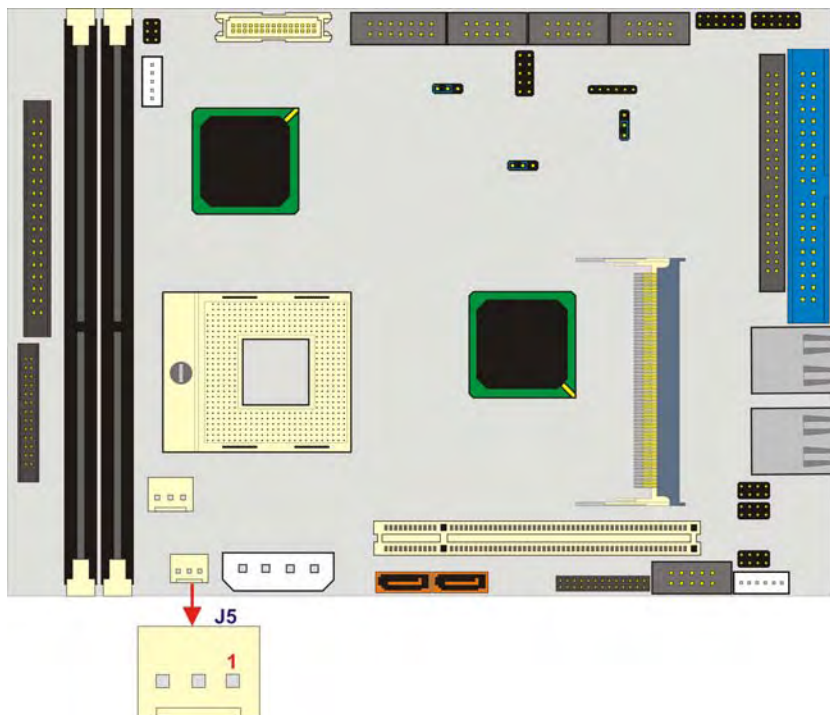


Figure 3-4: ATX PS_ON Connector Location

PIN NO.	DESCRIPTION
1	+5V_SB
2	GROUND
3	PS_ON

Table 3-5: ATX PS_ON Connector Pinouts

3.2.3 Audio Connector

- CN Label:** AUDIO1
- CN Type:** 12-pin header (2x6)
- CN Location:** See Figure 3-5
- CN Pinouts:** See Table 3-6

The audio connector is connected to an onboard codec. An external audio connector kit can be connected to the connector to provide sound input and output.

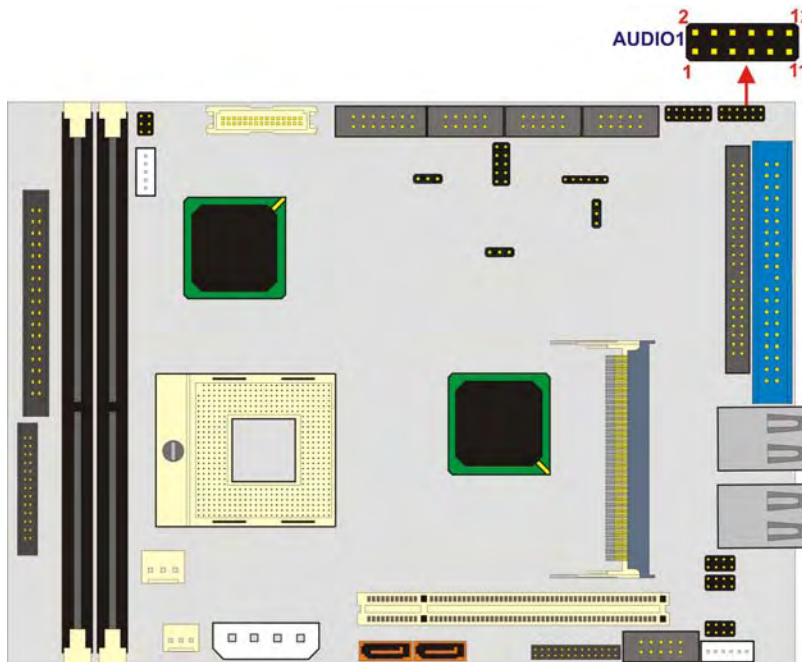


Figure 3-5: Audio Connector Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Left Speaker Out	2	Right Speaker Out
3	GND	4	GND
5	Line Out Left	6	Line Out Right
7	Line In Left	8	Line In Right
9	GND	10	GND
11	MIC IN	12	GND

Table 3-6: Audio Connector Pinouts

3.2.4 CompactFlash Connector

- CN Label:** J2 (solder side)
- CN Type:** 50-pin header (2x25)
- CN Location:** See Figure 3-6
- CN Pinouts:** See Table 3-7

A CompactFlash memory module is inserted to the CompactFlash 2 connector (J2). Jumper 2 (JP2) configures the CompactFlash drive as either a slave or master device.

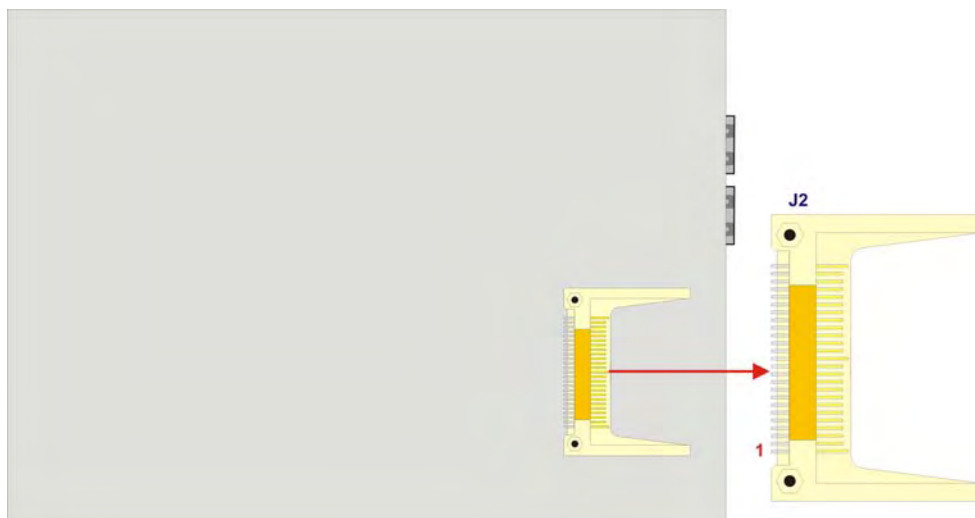


Figure 3-6: CompactFlash Connector Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GROUND	26	VCC-IN CHECK1
2	DATA 3	27	DATA 11
3	DATA 4	28	DATA 12
4	DATA 5	29	DATA 13
5	DATA 6	30	DATA 14
6	DATA 7	31	DATA 15
7	SDCS#1	32	SDCS#3
8	N/C	33	N/C
9	GROUND	34	IOR#
10	N/C	35	IOW#
11	N/C	36	VCC_COM
12	N/C	37	IRQ15
13	VCC_COM	38	VCC_COM
14	N/C	39	CSEL
15	N/C	40	N/C
16	N/C	41	HDD_RESET
17	N/C	42	IORDY
18	SA2	43	SDREQ
19	SA1	44	SDACK#
20	SA0	45	HDD_ACTIVE#
21	DATA 0	46	66DET
22	DATA 1	47	DATA 8
23	DATA 2	48	DATA 9
24	N/C	49	DATA 10
25	VCC-IN CHECK2	50	GROUND

Table 3-7: CompactFlash Connector Pinouts

3.2.5 Digital Input/Output (DIO) Connector

CN Label: DIO1

CN Type: 10-pin header (2x5)

CN Location: See Figure 3-7

CN Pinouts: See Table 3-8

The DIO connector is managed through a Super I/O chip. The DIO connector pins are user programmable.

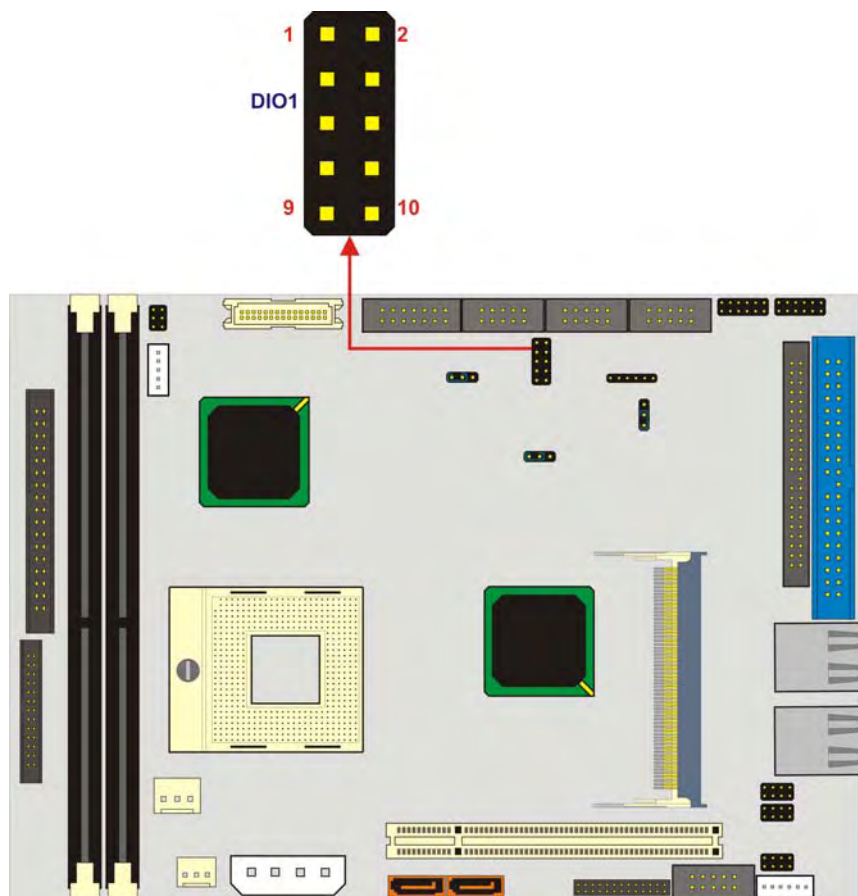


Figure 3-7: DIO Connector Connector Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	VCC
3	Output 0	4	Output 1
5	Output 2	6	Output 3
7	Input 0	8	Input 1
9	Input 2	10	Input 3

Table 3-8: DIO Connector Connector Pinouts

3.2.6 Digital Visual Interface (DVI) Connector

- CN Label:** DVI1
- CN Type:** 26-pin header (2x13)
- CN Location:** See **Figure 3-8**
- CN Pinouts:** See **Table 3-9**

The DVI connector converts analog signals into digital signals and provides connectivity to both analog and digital monitors.

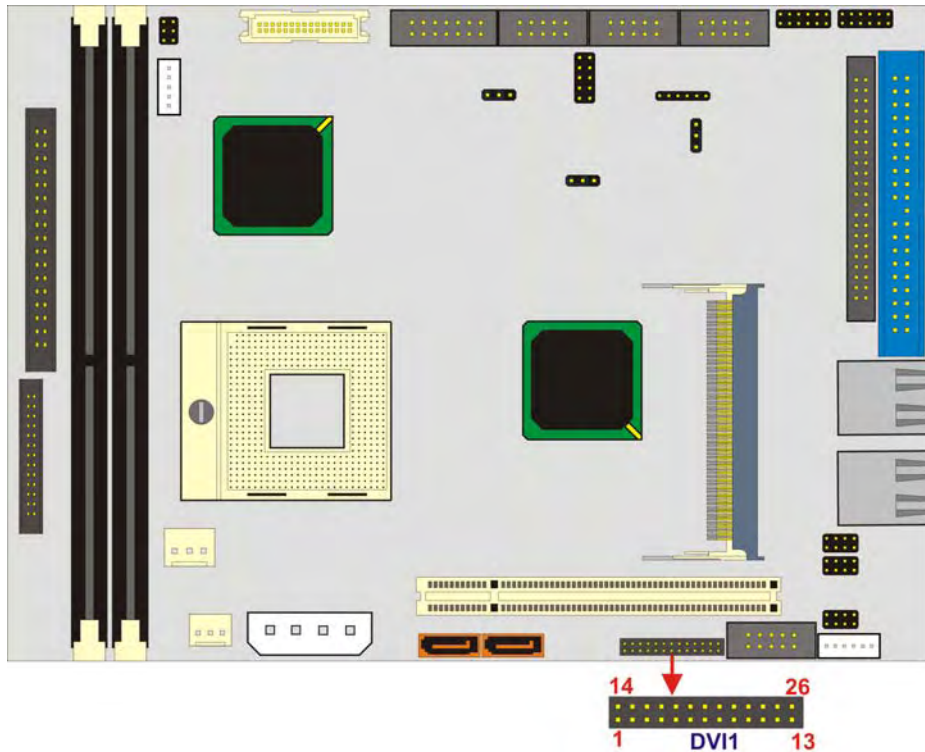


Figure 3-8: DVI Connector Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DATA2-	14	+5V
2	DATA2+	15	GND
3	GND	16	HPDET
4	NC	17	DATA0-
5	NC	18	DATA0+

6	DDCCLK	19	GND
7	DDCDATA	20	NC
8	NC	21	NC
9	DATA1-	22	GND
10	DATA1+	23	CLK+
11	GND	24	CLK-
12	NC	25	GND
13	NC	26	NC

Table 3-9: DVI Connector Connector Pinouts

3.2.7 Fan Connector

- CN Label:** J4
- CN Type:** 3-pin header
- CN Location:** See **Figure 3-9**
- CN Pinouts:** See **Table 3-10**

The cooling fan connector provides a 12V, 500mA current to a system cooling fan. The connector has a "rotation" pin to get rotation signals from fans and notify the system so the system BIOS can recognize the fan speed. Please note that only specified fans can issue the rotation signals.

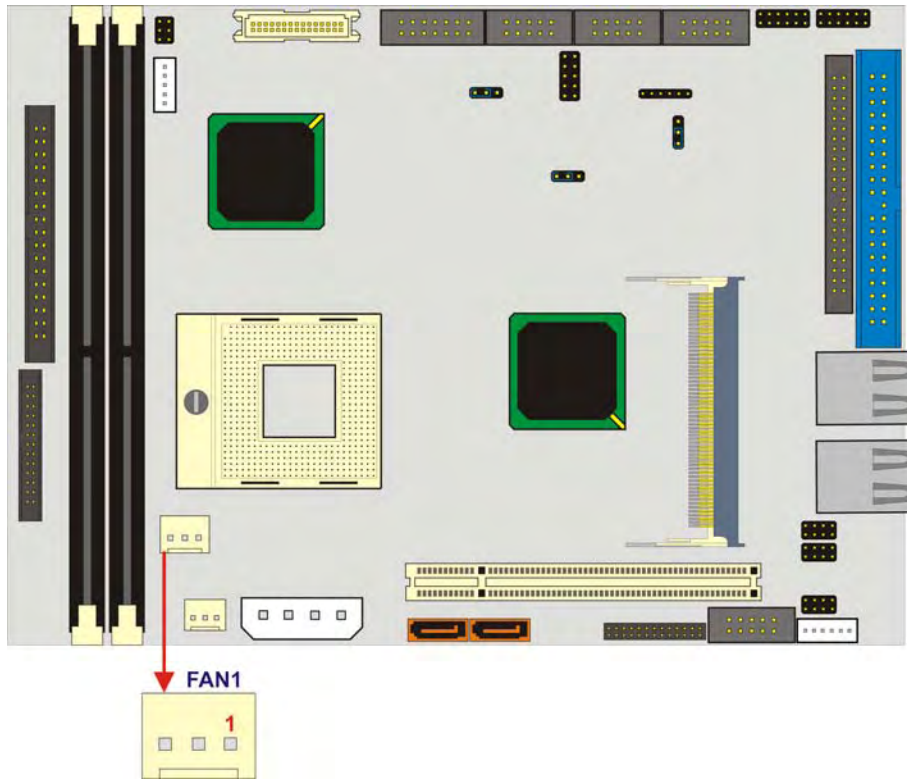


Figure 3-9: Fan Connector Location

PIN NO.	DESCRIPTION
1	Fan Speed Detect
2	+12V
3	GND

Table 3-10: Fan Connector Pinouts

3.2.8 Floppy Disk Connector

- CN Label:** FDD1
- CN Type:** 34-pin header (2x17)
- CN Location:** See **Figure 3-10**
- CN Pinouts:** See **Table 3-11**

The floppy disk connector (FDD1) is connected to a floppy disk drive.

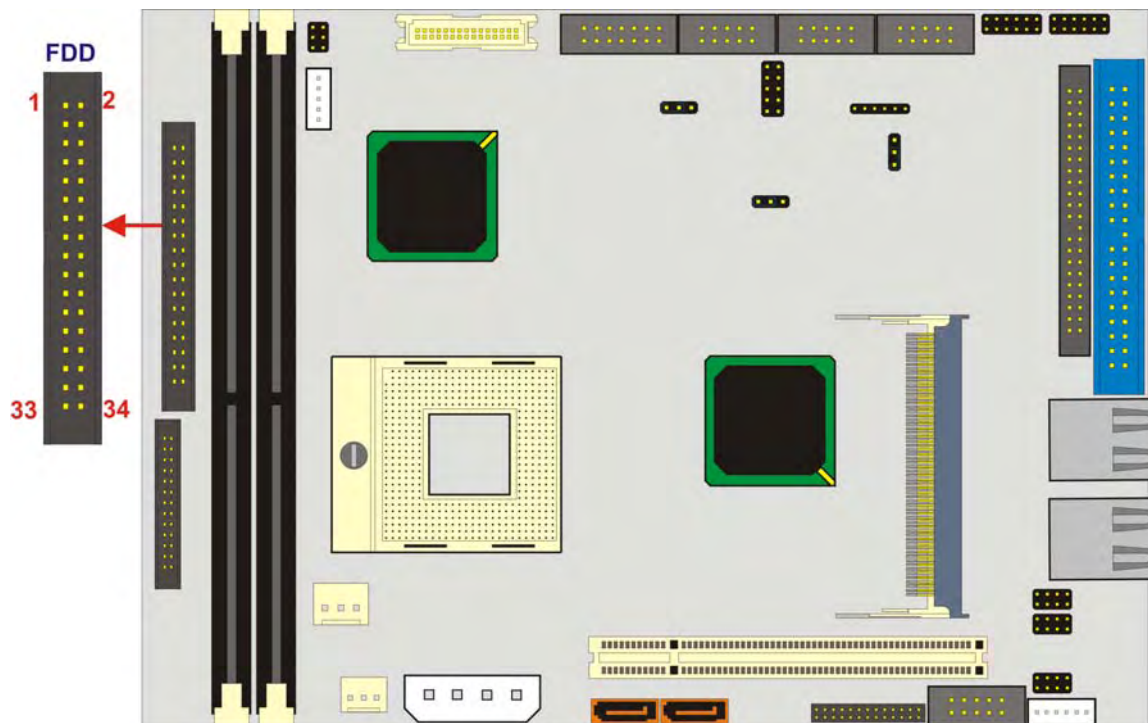


Figure 3-10: FDD Connector Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	DRVDENO
3	GND	4	N/C
5	N/C	6	DRVDEN1
7	GND	8	INDEX#
9	GND	10	MOTOR ENABLE A#
11	GND	12	DRIVE SELECT B#
13	GND	14	DRIVE SELECT A#
15	GND	16	MOTOR ENABLE B#
17	GND	18	DIRECTION#
19	GND	20	STEP#
21	GND	22	WRITE DATA#
23	GND	24	WRITE GATE#
25	GND	26	TRACK 0#
27	GND	28	WRITE PROTECT#
29	GND	30	READ DATA#
31	GND	32	SIDE 1 SELECT#

33	GND	34	DISK CHANGE#
----	-----	----	--------------

Table 3-11: FDD Connector Pinouts

3.2.9 Front Panel Connector

CN Label:	CN1
CN Type:	12-pin header (2x6)
CN Location:	See Figure 3-11
CN Pinouts:	See Table 3-12

The front panel connector (CN1) connects to several external switches and indicators to monitor and controls the motherboard. These indicators and switches include:

- Power button
- Reset button
- Speaker
- Power LED
- HDD LED

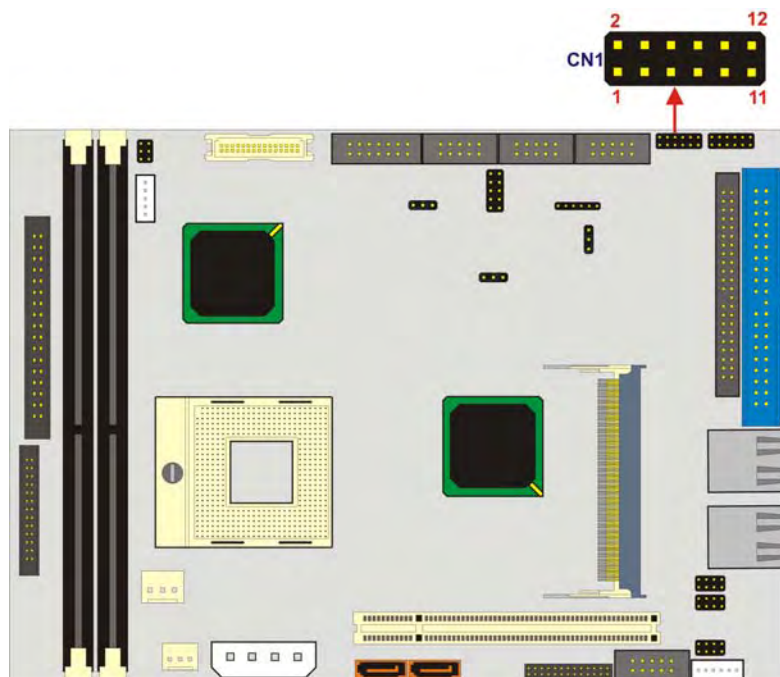


Figure 3-11: Front Panel Connector Locations

FUNCTION	PIN	DESCRIPTION	FUNCTION	PIN	DESCRIPTION
Power LED	1	LED+	Buzzer	2	BUZZER-
	3	LED-		4	NC
Power	5	BUTTON1		6	NC
Button	7	BUTTON2		8	VCC
HDD LED	9	HDD LED+	Reset	10	RESET
	11	HDD LED-		12	GND

Table 3-12: Front Panel Connector Pinouts

3.2.10 IDE Connector (Primary)

- CN Label:** IDE1
- CN Type:** 40-pin header (2x20)
- CN Location:** See **Figure 3-12**
- CN Pinouts:** See **Table 3-13**

One primary 40-pin primary IDE device connector on the 3308040 motherboard supports connectivity to Ultra ATA/33/66/100 IDE devices with data transfer rates up to 100MB/s.

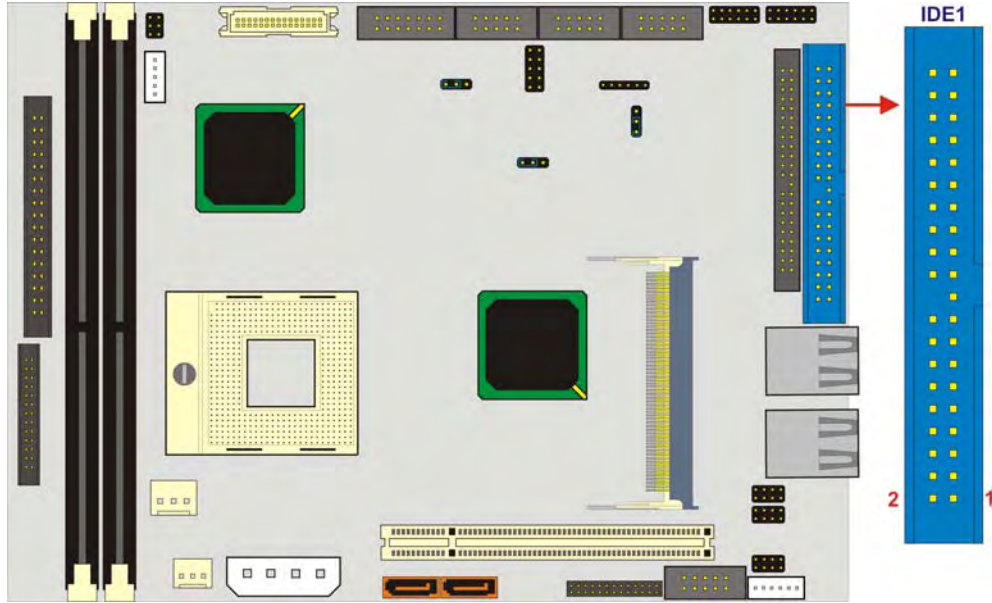


Figure 3-12: Primary IDE Device Connector Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RESET#	2	GROUND
3	DATA 7	4	DATA 8
5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	GROUND	20	N/C
21	IDE DRQ	22	GROUND
23	IOW#	24	GROUND
25	IOR#	26	GROUND
27	IDE CHRDY	28	GROUND-DEFAULT
29	IDE DACK	30	GROUND
31	INTERRUPT	32	N/C
33	SA1	34	P66DET
35	SA0	36	SA2

37	HDC CS0#	38	HDC CS1#
39	HDD ACTIVE#	40	GROUND

Table 3-13: Primary IDE Connector Pinouts

3.2.11 IDE Connector (Secondary)

CN Label:	IDE2
CN Type:	44pin header (2x22)
CN Location:	See Figure 3-13
CN Pinouts:	See Table 3-14

One 44-pin secondary IDE device connector on the 3308040 motherboard supports connectivity to Ultra ATA/33/66/100 IDE devices with data transfer rates up to 100MB/s.

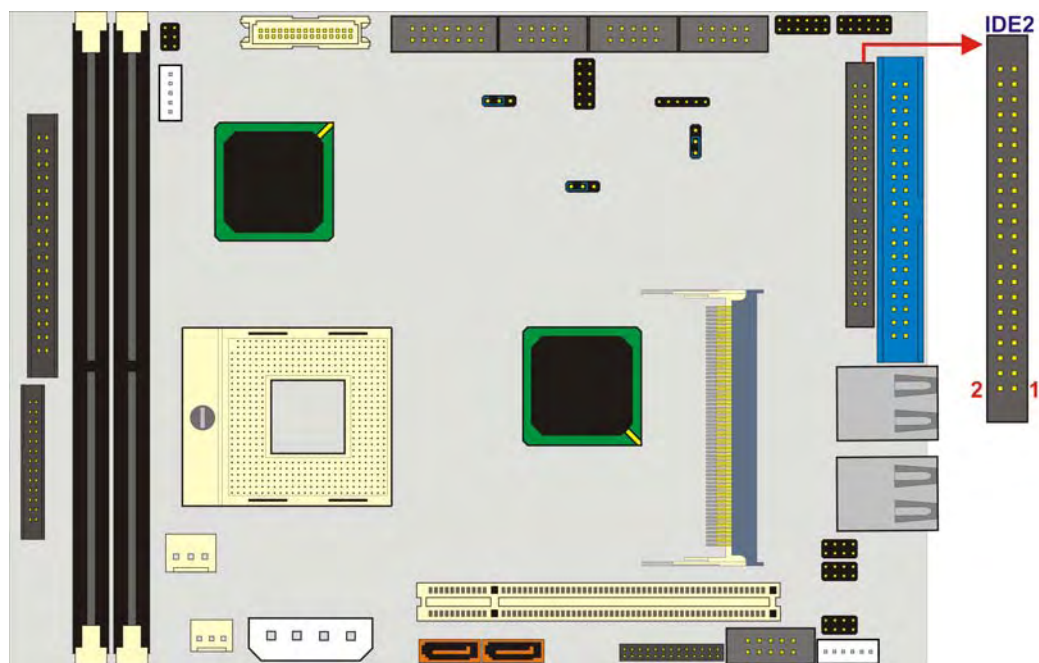


Figure 3-13: Secondary IDE Device Connector Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RESET#	2	GROUND
3	DATA 7	4	DATA 8

5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	GROUND	20	N/C
21	IDE DRQ	22	GROUND
23	IOW#	24	GROUND
25	IOR#	26	GROUND
27	IDE CHRDY	28	GROUND-DEFAULT
29	IDE DACK	30	GROUND
31	INTERRUPT	32	N/C
33	SA1	34	S66DET
35	SA0	36	SA2
37	HDC CS0#	38	HDC CS1#
39	HDD ACTIVE#	40	GROUND
41	VCC	42	VCC
43	GROUND	44	N/C

Table 3-14: Secondary IDE Connector Pinouts

3.2.12 Inverter Power Connector

- CN Label:** CN2
- CN Type:** 5-pin header (1x5)
- CN Location:** See **Figure 3-14**
- CN Pinouts:** See **Table 3-15**

The inverter connector is connected to the LCD backlight.

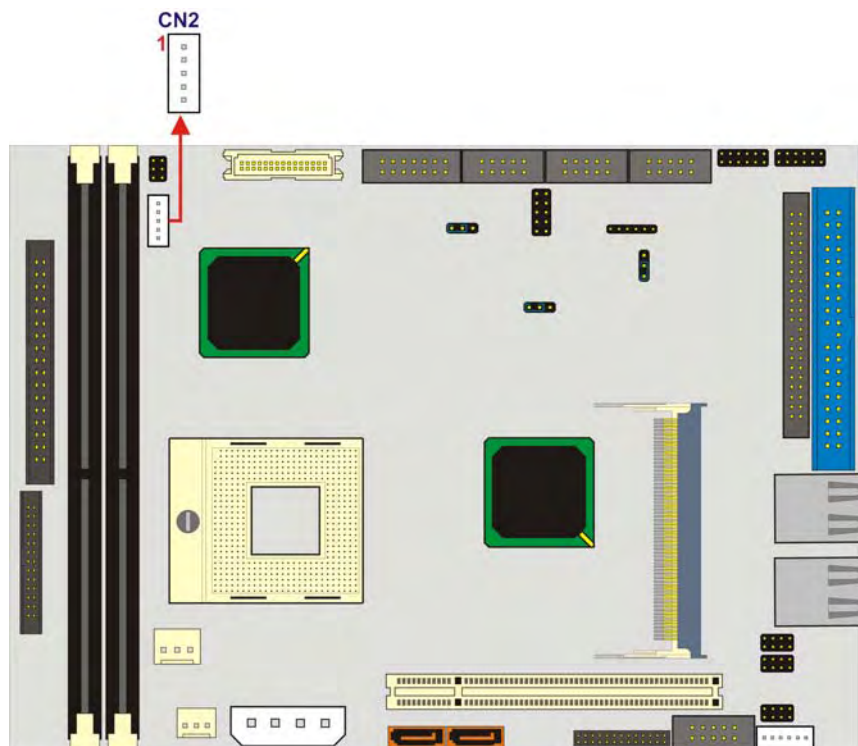


Figure 3-14: Inverter Connector Locations

PIN NO.	DESCRIPTION
1	NC
2	GND
3	BKL_POWER (+12V)
4	GND
5	+5V

Table 3-15: Inverter Power Connector Pinouts

3.2.13 IR Interface Connector

CN Label:	IR1
CN Type:	6-pin header (1x6)
CN Location:	See Figure 3-15
CN Pinouts:	See Table 3-16

The integrated infrared (IrDA) connector supports both Serial Infrared (SIR) and Amplitude Shift Key Infrared (ASKIR) interfaces.

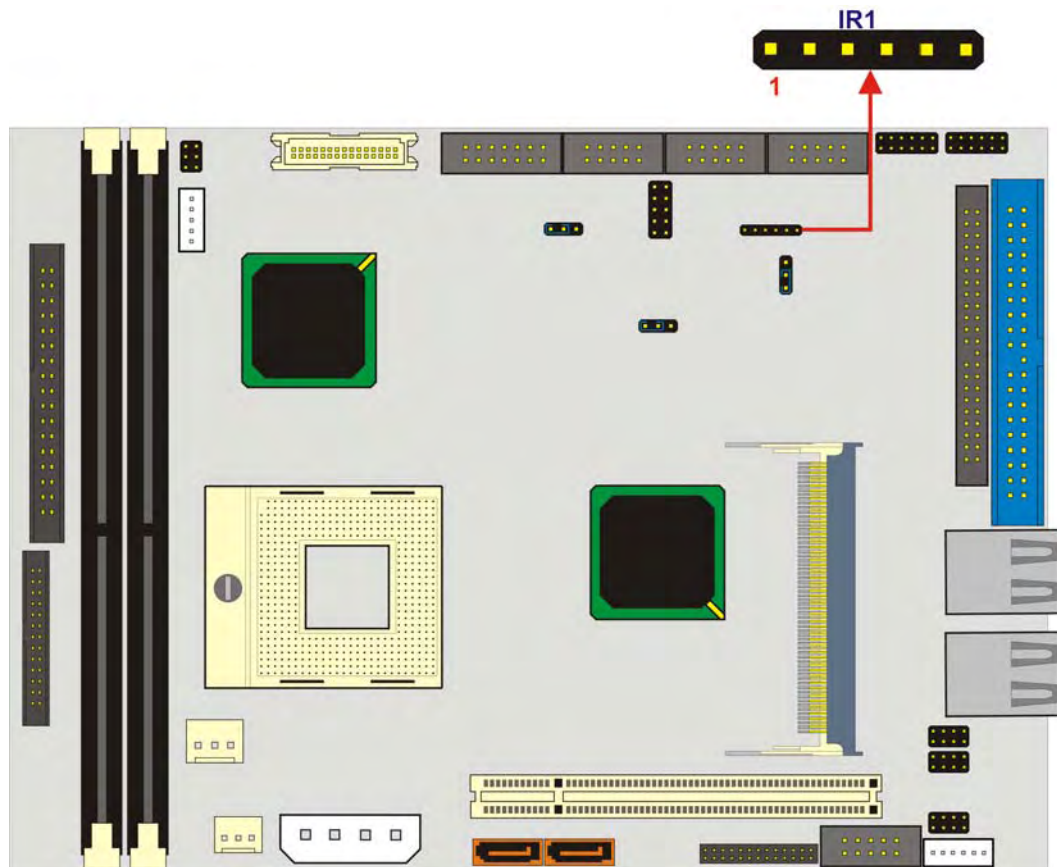


Figure 3-15: IR Connector Pinout Locations

PIN NO.	DESCRIPTION
1	5V
2	NC
3	IRRX
4	GND
5	IRTX
6	CIRRX

Table 3-16: IR Connector Pinouts

3.2.14 Keyboard/Mouse Connector

CN Label:	KB/PS1
CN Type:	6-pin header (1x6)
CN Location:	See Figure 3-16
CN Pinouts:	See Table 3-17

The keyboard and mouse connector can be connected to a standard PS/2 cable or PS/2 Y-cable to add keyboard and mouse functionality to the system.

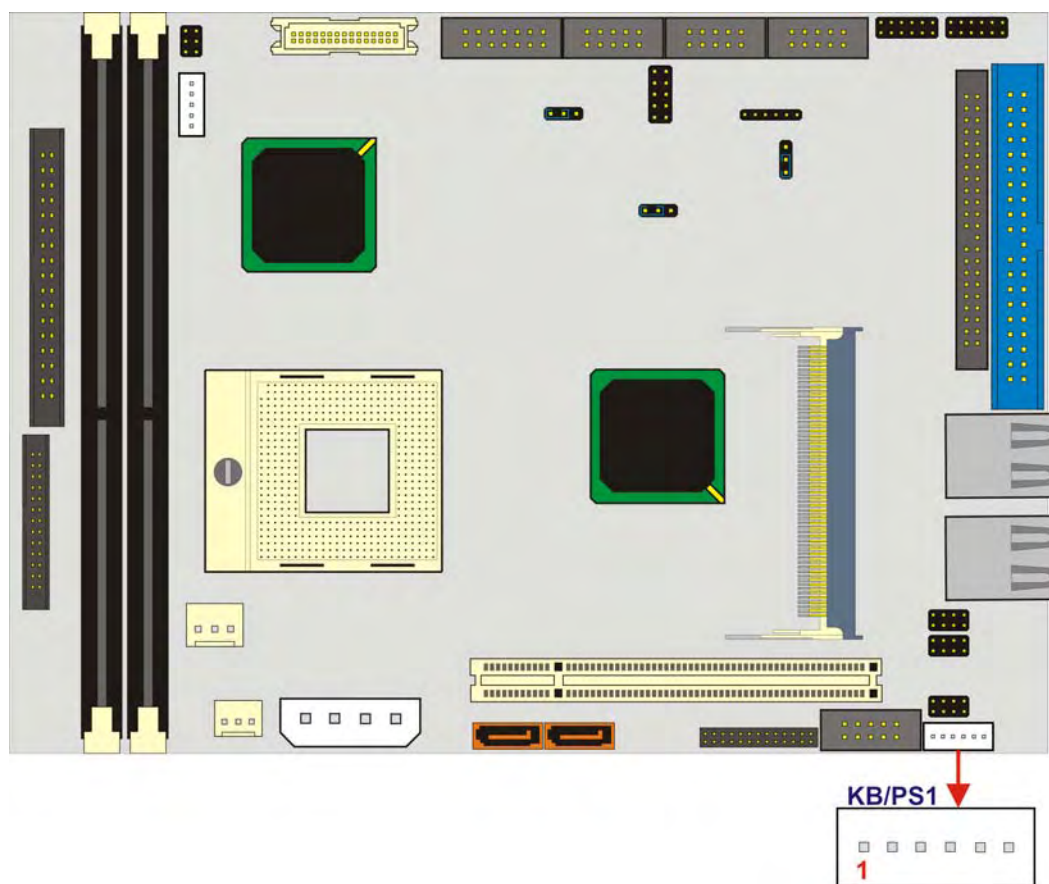


Figure 3-16: Keyboard/Mouse Connector Location

PIN NO.	DESCRIPTION
1	+5V_KB
2	MS DATA
3	MS CLK
4	KB DATA
5	KB CLK
6	GROUND

Table 3-17: Keyboard/Mouse Connector Pinouts

3.2.15 LCD LVDS Connector

- CN Label:** LVDS1
- CN Type:** 30-pin header (2x15)
- CN Location:** See **Figure 3-17**
- CN Pinouts:** See **Figure 3-17**

The LVDS LCD connector (LVDS1) connects to a one or two channel 18-bit LVDS panel.

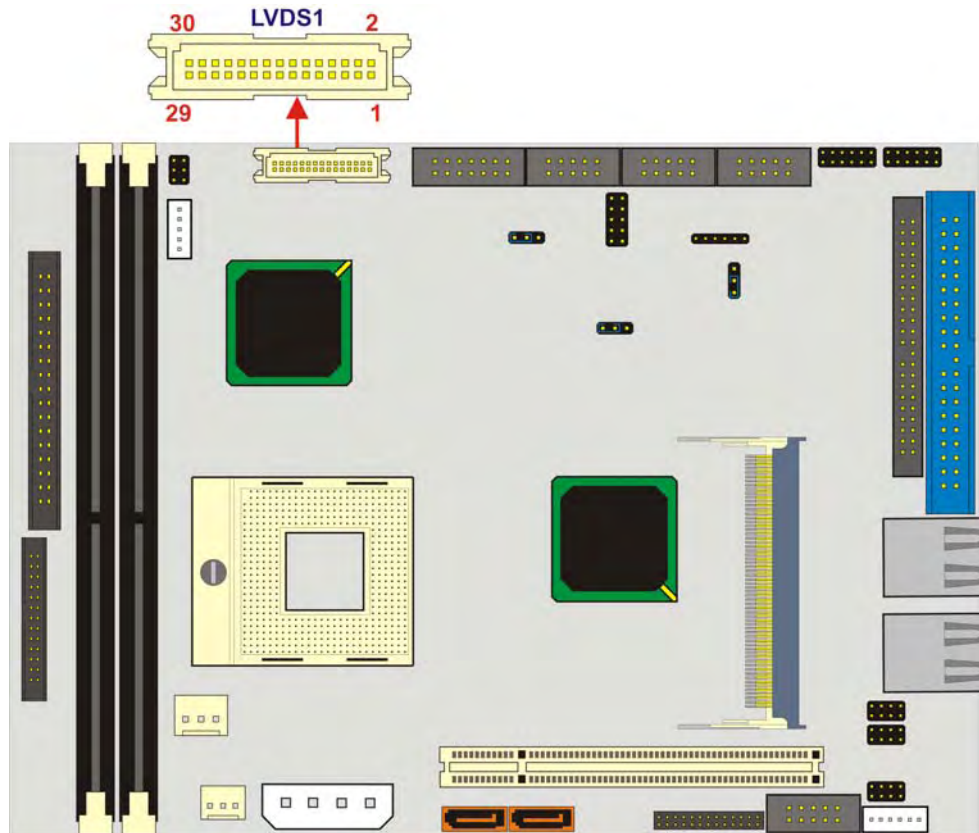


Figure 3-17: LVDS Connector Locations

PIN	DESCRIPTION	PIN	DESCRIPTION
1	GND	2	GND
3	A0P	4	A0N
5	A1P	6	A1N
7	A2P	8	A2N
9	CLK1P	10	CLK1N
11	A3P	12	A3N
13	GND	14	GND
15	A4P	16	A4N
17	A5P	18	A5N
19	A6P	20	A6N
21	CLK2P	22	CLK2N
23	A7P	24	A7N
25	GND	26	GND

27	LCD_VDD	28	LCD_VDD
29	LCD_VDD	30	LCD_VDD

Table 3-18: LCD LVDS Connector Pinouts

3.2.16 Parallel Port Connector

- CN Label:** LPT1
- CN Type:** 26-pin box header
- CN Location:** See **Figure 3-18**
- CN Pinouts:** See **Table 3-19**

The 3308040 has one 26 pin box header that can be connected to a parallel port connector interface or some other parallel port device such as a printer.

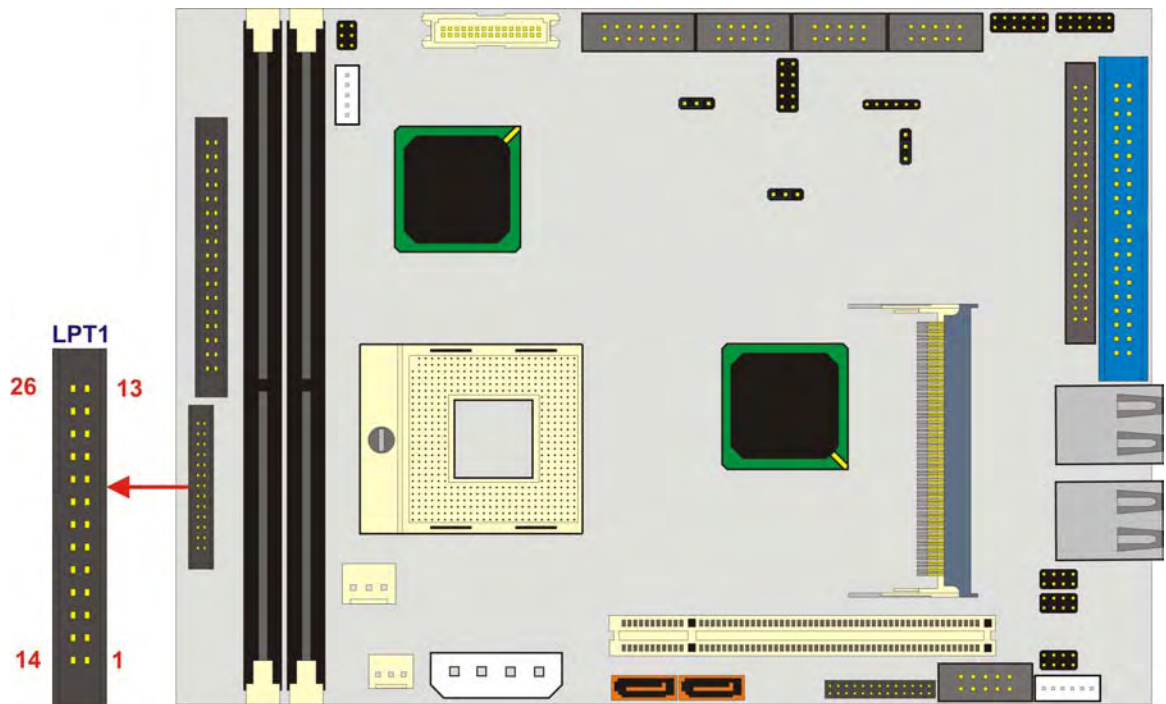


Figure 3-18: Parallel Port Connector Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	STROBE#	2	DATA 0
3	DATA 1	4	DATA 2
5	DATA 3	6	DATA 4
7	DATA 5	8	DATA 6
9	DATA 7	10	ACKNOWLEDGE
11	BUSY	12	PAPER EMPTY
13	PRINTER SELECT	14	AUTO FORM FEED #
15	ERROR#	16	INITIALIZE
17	PRINTER SELECT LN#	18	GROUND
19	GROUND	20	GROUND
21	GROUND	22	GROUND
23	GROUND	24	GROUND
25	GROUND	26	NC

Table 3-19: Parallel Port Connector Pinouts

3.2.17 RS-232 Serial Port Connectors

CN Label: COM1, COM2 and COM3

CN Type: 10-pin header (2x5)

CN Location: See Figure 3-19

CN Pinouts: See Table 3-20

The COM1, COM2 and COM3 serial port connectors connect to RS-232 serial port devices.

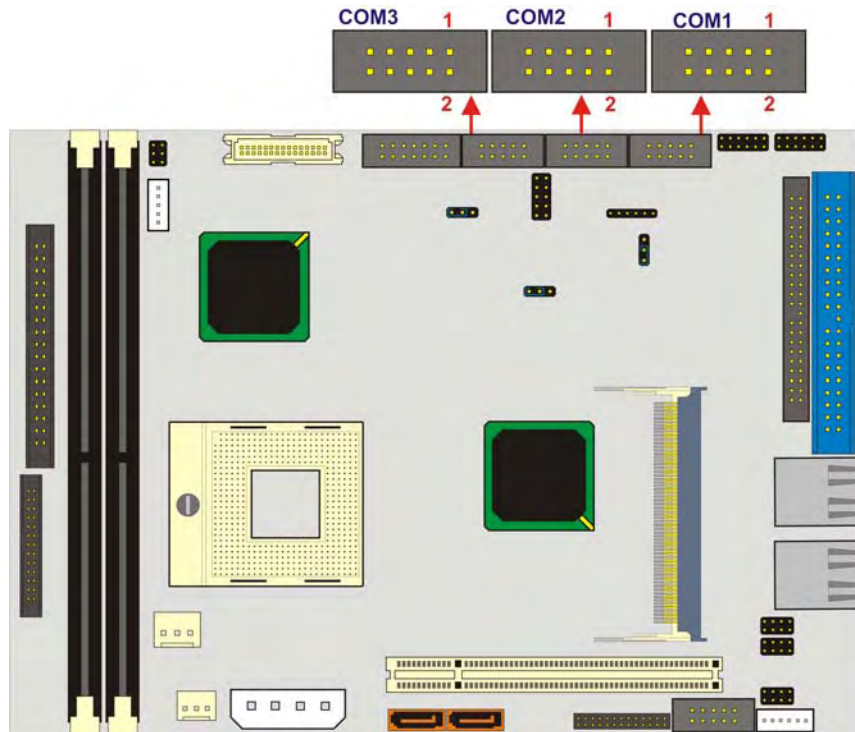


Figure 3-19: RS-232 Serial Port Connector Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8	RI
9	GND	10	GND

Table 3-20: RS-232 Serial Port Connector Pinouts

3.2.18 RS-232/422/485 Serial Port Connector

- CN Label:** COM4
- CN Type:** 14-pin header (2x7)
- CN Location:** See Figure 3-20
- CN Pinouts:** See Table 3-21

The COM2 serial port connector connects to an RS-232, RS-422 or RS-485 serial port devices.

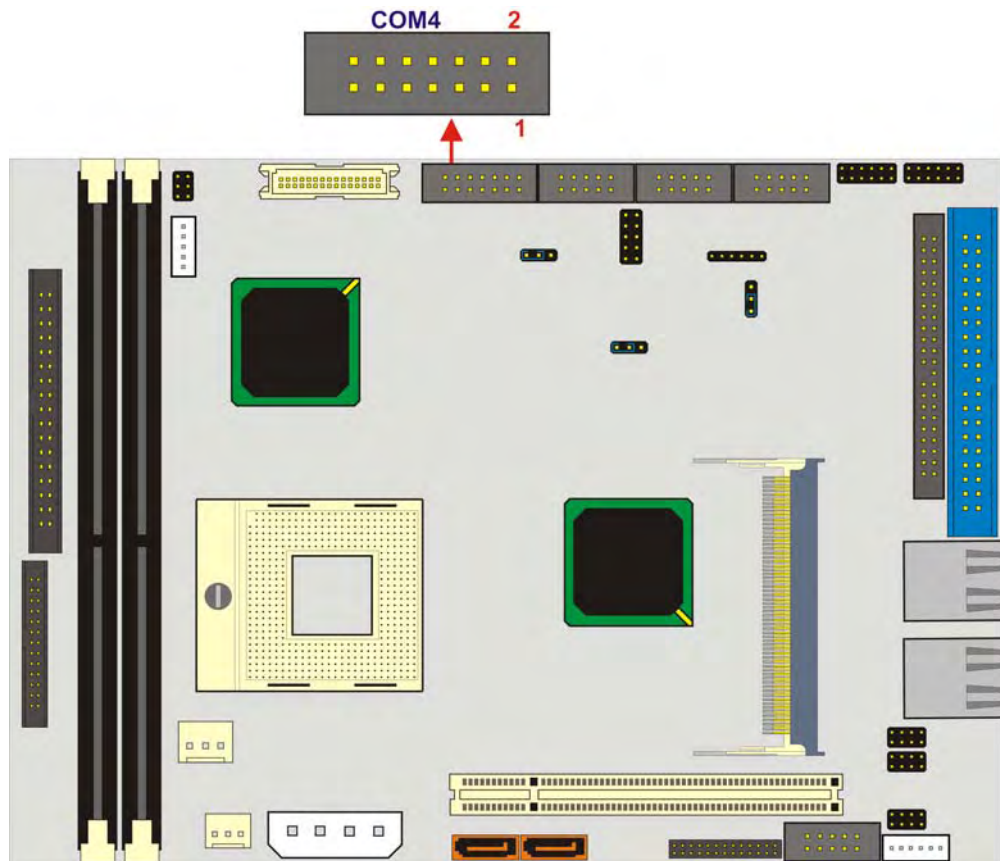


Figure 3-20: RS-232/422/485 Serial Port Connector Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8	RI
9	GND	10	GND
11	TX+ (RS-422/485)	12	TX- (RS-422/485)
13	RX+ (RS-422)	14	RX- (RS-422)

Table 3-21: RS-232/RS-422/RS-485 Serial Port Connector Pinouts

3.2.19 SATA Drive Connectors

- CN Label:** SATA1 and SATA2
- CN Type:** 7-pin SATA drive connectors
- CN Location:** See Figure 3-22
- CN Pinouts:** See Table 3-23

The two SATA drive connectors are connected to two first generation SATA drives. First generation SATA drives transfer data at speeds as high as 150MB/s.

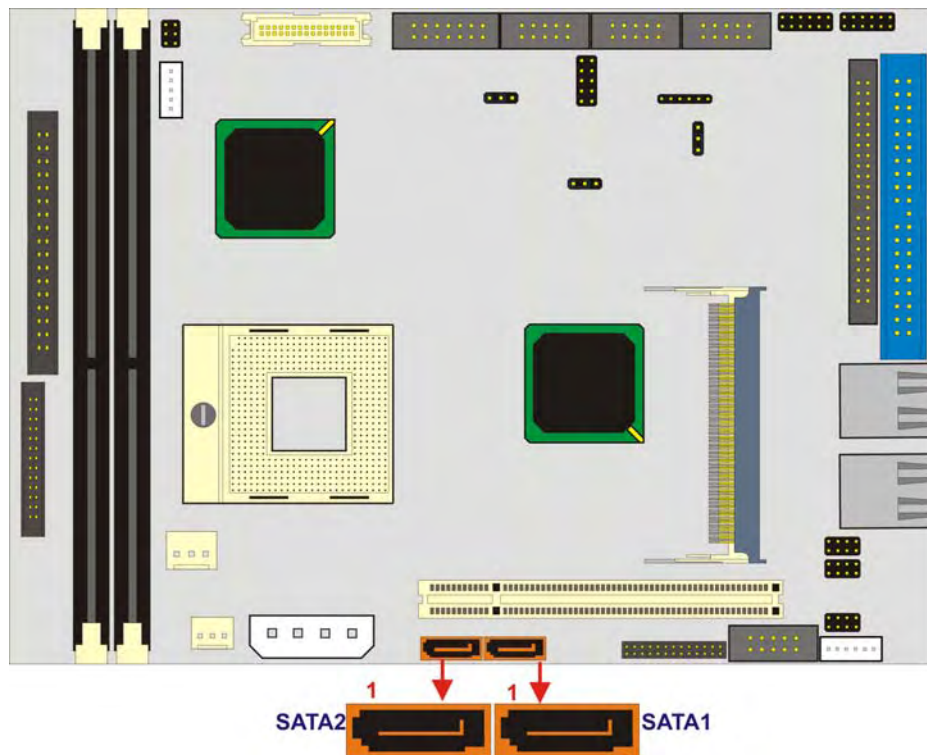


Figure 3-21: SATA Drive Connector Locations

PIN NO.	DESCRIPTION
1	GND
2	TX+
3	TX-
4	GND

5	RX-
6	RX+
7	GND

Table 3-22: SATA Drive Connector Pinouts

3.2.20 Internal USB Connectors

CN Label: USB1, USB2 and USB3

CN Type: 8-pin header (2x4)

CN Location: See Figure 3-22

CN Pinouts: See Table 3-23

The 2x4 USB pin connectors provide connectivity USB 2.0 ports. Each USB connector can support two USB devices. The USB ports are used for I/O bus expansion.

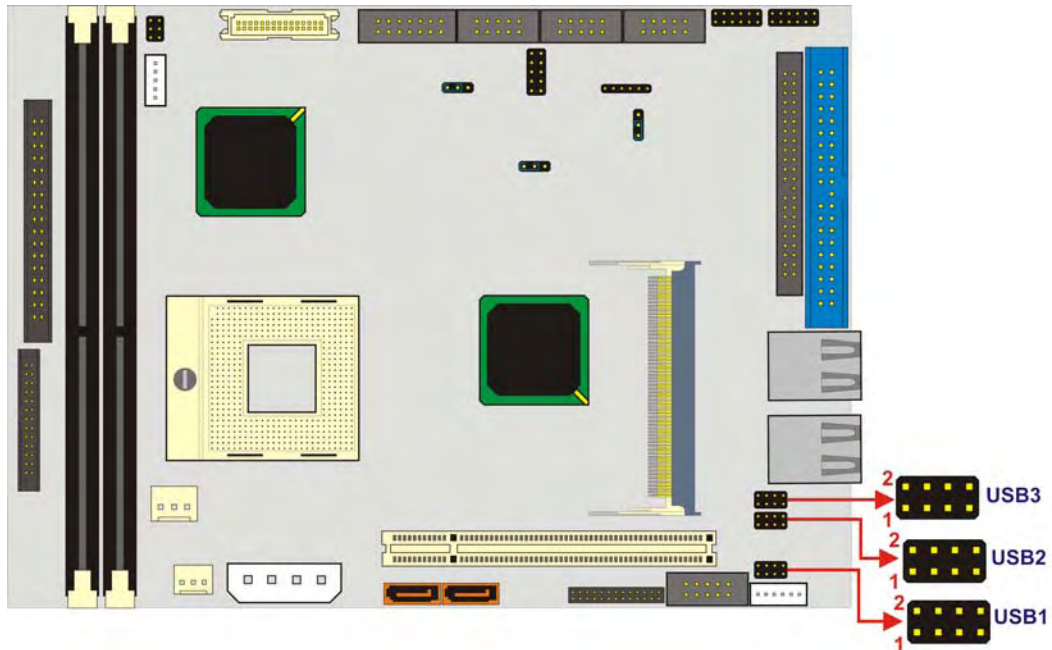


Figure 3-22: USB Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC_USB	2	GND
3	DATA0-	4	DATA1+
5	DATA0+	6	DATA1-
7	GND	8	VCC_USB

Table 3-23: USB Port Connector Pinouts

3.2.21 VGA Connector (Internal)

- CN Label:** VGA1
- CN Type:** 10-pin header (2x5)
- CN Location:** See Figure 3-23
- CN Pinouts:** See Table 3-24

The internal VGA connector connects to an external VGA display for system monitoring.

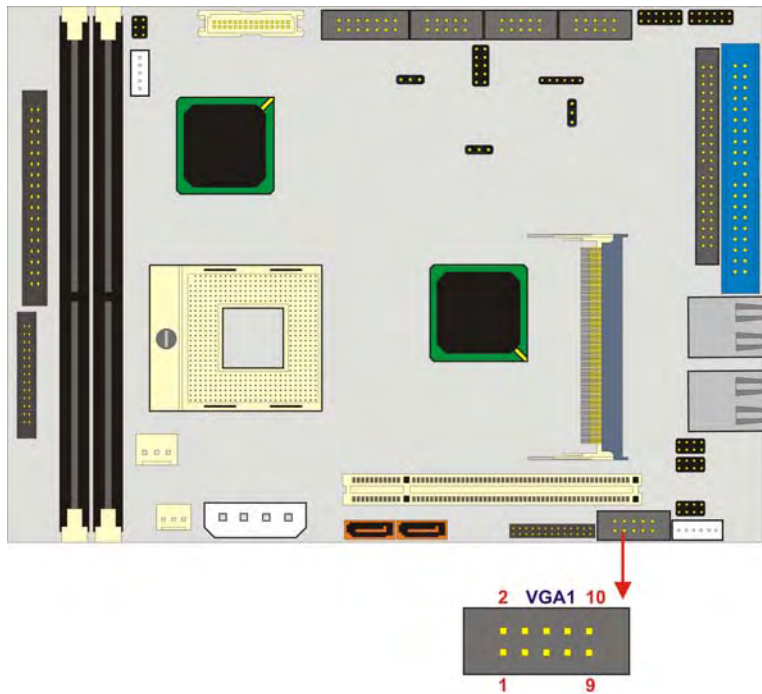


Figure 3-23: VGA Connector Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RED	2	DDC CLK
3	GREEN	4	DDC DAT
5	BLUE	6	GND
7	HSYNC	8	GND
9	VSYNC	10	GND

Table 3-24: VGA Connector Pinouts

3.3 External (Rear Panel) Connectors

Figure 3-24 shows the 3308040 rear panel. The 3308040 rear panel consists of two RJ-45 Ethernet connectors. These connectors are accessible when the 3308040 is installed in a chassis.

- 2 x RJ-45 GbE connector



Figure 3-24: 3308040 Rear Panel

3.3.1 LAN Connectors

CN Label: J7 and J8 (See Figure 3-24)

CN Type: RJ-45

CN Location: See Figure 3-24

CN Pinouts: See Table 3-25 (RJ-45)

The 3308040 is equipped with two built-in GbE Ethernet controllers. The controllers can connect to the LAN through two RJ-45 LAN connectors. There are two LEDs on the connector indicating the status of LAN. The pin assignments are listed in the following table:

PIN	DESCRIPTION	PIN	DESCRIPTION
1	TX0+	8	TX2-
2	TX0-	9	TX3+
3	TX1+	10	TX3-
4	TX1-	11	LINK100#
5	VCC_LAN	12	LINK1000#
6	VCC_LAN	13	LINK#
7	TX2+	14	ACT#

Table 3-25: LAN Pinouts

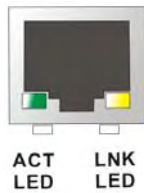


Figure 3-25: RJ-45 Ethernet Connector

The RJ-45 Ethernet connector has two status LEDs, one green and one yellow. The green LED indicates activity on the port and the yellow LED indicates the port is linked. See **Table 3-26**.

STATUS	DESCRIPTION	STATUS	DESCRIPTION
GREEN	Activity	YELLOW	Linked


Table 3-26: RJ-45 Ethernet Connector LEDs

3.4 Onboard Jumpers



NOTE:

A jumper is a metal bridge that is used to close an electrical circuit. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To CLOSE/SHORT a jumper means connecting the pins of the jumper with the plastic clip and to OPEN a jumper means removing the plastic clip from a jumper.

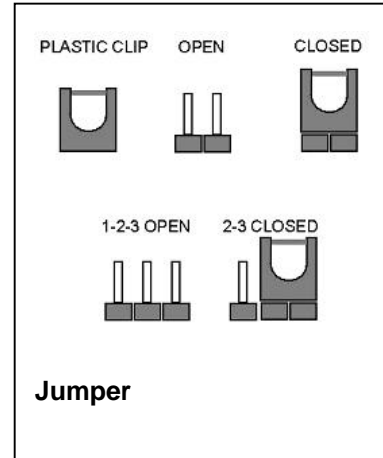

The 3308040 motherboard has four onboard jumpers. The jumpers are described in **Table 3-27**.

Description	Label	Type
Clear CMOS	JP1	3-pin header
CF card setup	JP2	3-pin header
LCD LVDS1 voltage setup	JP3	6-pin header
COM4 setup (RS-232/422/485)	JP4	3-pin header

Table 3-27: Jumpers

3.4.1 Clear CMOS Jumper

Jumper Label:	JP1
Jumper Type:	3 pin header
Jumper Settings:	See Table 3-28
Jumper Location:	See Figure 3-26

If the 3308040 fails to boot due to improper BIOS settings, use this jumper to clear the CMOS data and reset the system BIOS information. To do this, use the jumper cap to close pins 2 and 3 for a few seconds then reinstall the jumper clip back to pins 1 and 2.

If the “CMOS Settings Wrong” message is displayed during the boot up process, the fault may be corrected by pressing the F1 to enter the CMOS Setup menu. Do one of the following:

- Enter the correct CMOS setting
- Load Optimal Defaults
- Load Failsafe Defaults.

After having done one of the above, save the changes and exit the CMOS Setup menu.

Clear CMOS	DESCRIPTION
1-2 (Default)	Keep CMOS Setup
2-3	Clear CMOS Setup

Table 3-28: Clear CMOS Jumper Settings

The clear CMOS jumper location is shown in Figure 3-26.

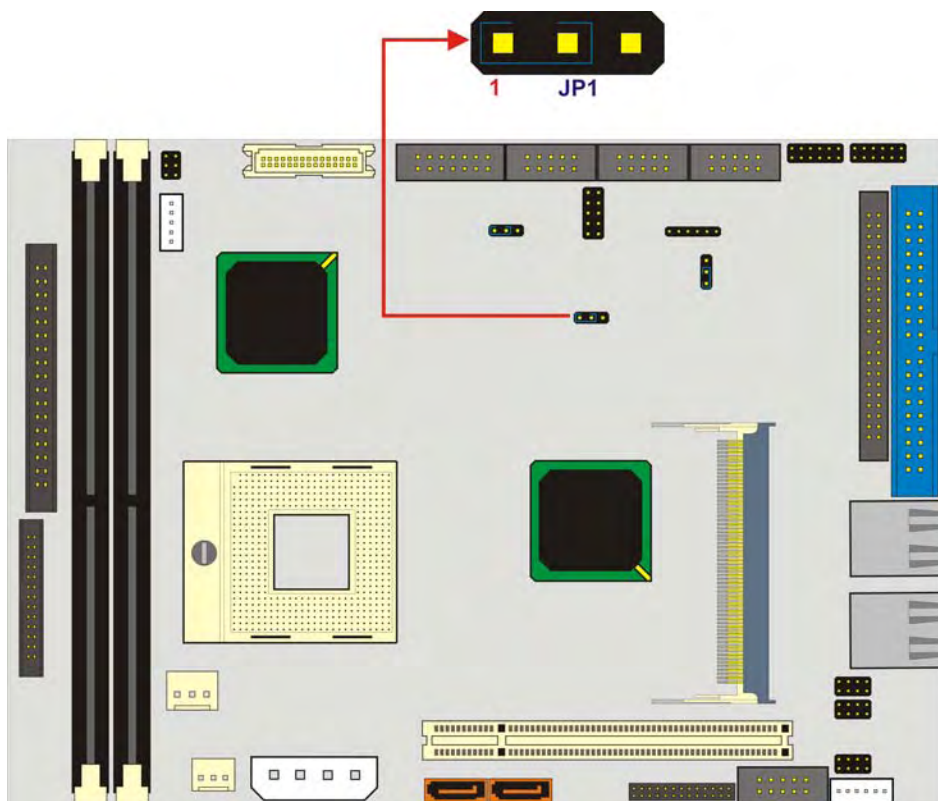


Figure 3-26: CLR_CMOS Pinout Locations

3.4.2 CF Card Setup

Jumper Label:	JP2
Jumper Type:	3-pin header
Jumper Settings:	See
Jumper Location:	See Figure 3-27

The CF Card Setup jumper sets the CompactFlash card as either the slave device or the master device.

JP5	DESCRIPTION
OPEN (Default)	Slave
CLOSE 1-2	Master

Table 3-29: CF Card Setup Jumper Settings

The CF Card Setup jumper location is shown in Figure 3-26

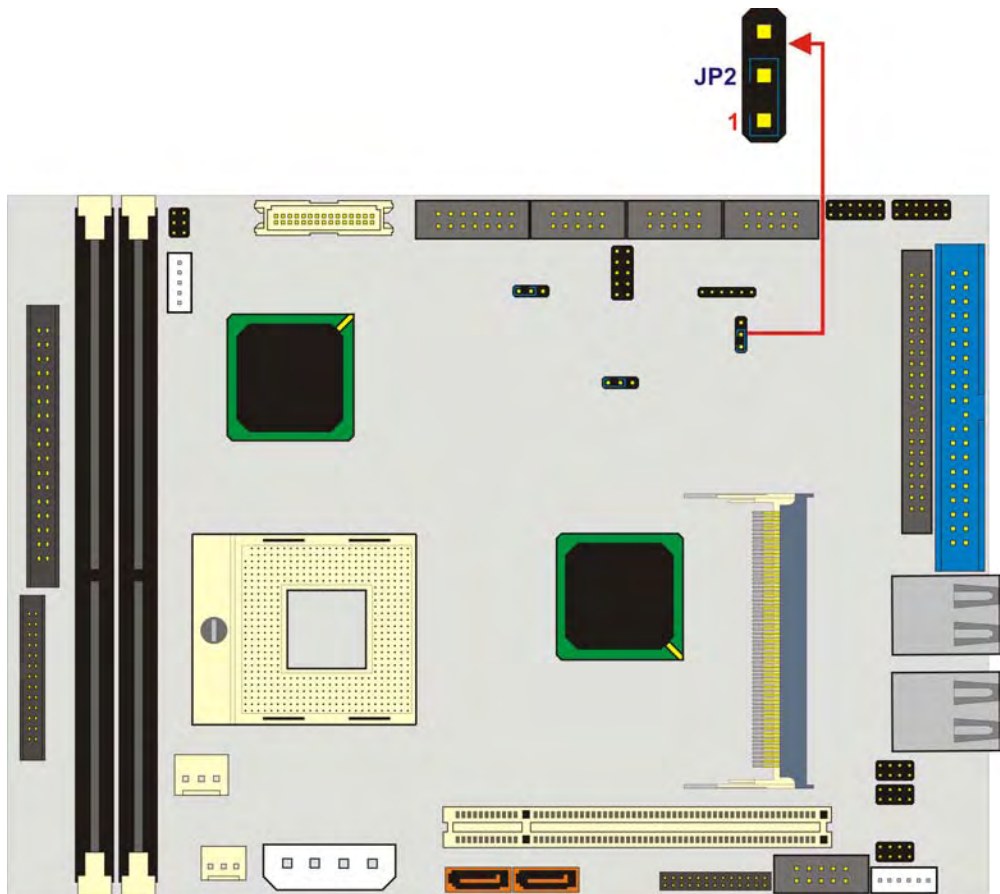


Figure 3-27: JP5 Pinout Locations

3.4.3 LCD Voltage Setup Jumper

**WARNING:**

Making the wrong setting on this jumper may cause irreparable damage to both the motherboard and the LCD screen connected to the onboard connector.

Jumper Label:	JP3
Jumper Type:	6-pin header
Jumper Settings:	See Table 3-30
Jumper Location:	See Figure 3-28

This jumper allows the user to set the voltage for the LCD panel. Before setting this jumper please refer to the LCD panel user guide to determine the required voltage. After the required voltage is known, make the necessary jumper setting in accordance with the settings shown in **Table 3-30**.

JP3	DESCRIPTION
Short 1-2 (Default)	+3.3V
Short 3-4	+5V
Short 5-6	+12V

Table 3-30: JP3 Jumper Settings

The LCD Voltage Setup jumper location is shown in **Figure 3-28** below.

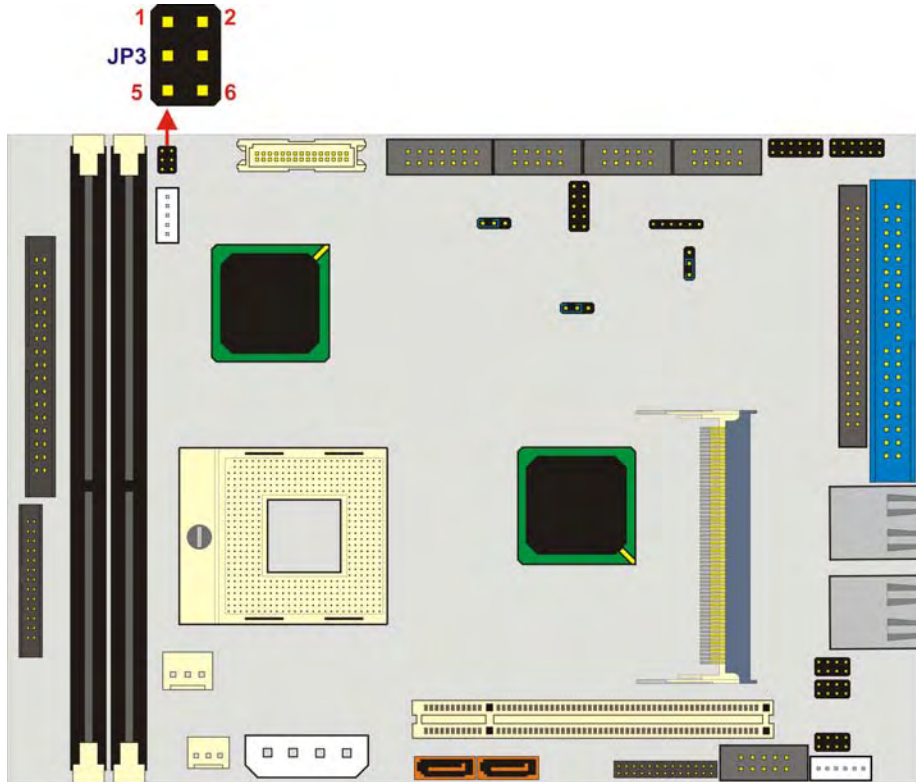


Figure 3-28: JP3 Pinout Locations

3.4.4 COM4 Setup Jumper (RS-232/422/485)

Jumper Label:	JP4
Jumper Type:	3-pin header
Jumper Settings:	See Table 3-30
Jumper Location:	See Figure 3-28

This jumper configures the COM4 connector as an RS-232 serial port or as an RS-422 / RS-485 serial port. The selection options are shown in **Table 3-30**.

COM4	DESCRIPTION
Short 1 – 2 (Default)	RS-232
Short 2 – 3	RS-422 / RS-485

Table 3-31: COM4 Setup Jumper Settings

The COM4 Setup jumper location is shown in Figure 3-28 below.

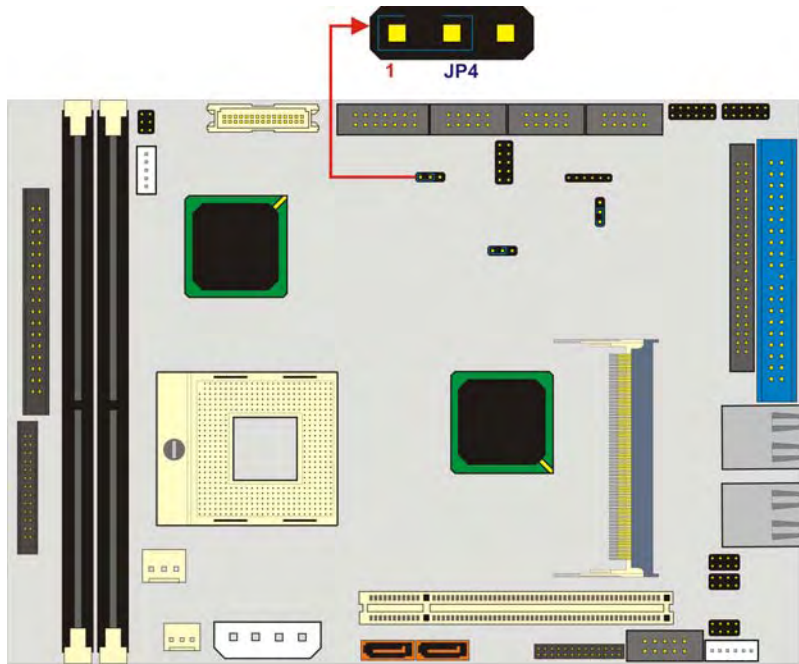


Figure 3-29: COM4 Setup Jumper Pinout Locations

THIS PAGE IS INTENTIONALLY LEFT BLANK

Chapter

4

Installation and Configuration

4.1 Anti-static Precautions

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the 3308040. (Dry climates are especially susceptible to ESD.) It is therefore critical that whenever the 3308040 (or any other electrical component) is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wrist band:** - Wearing a simple anti-static wrist band can help to prevent ESD from damaging the board.
- **Self-grounding:**- Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.

4.2 Installation Considerations



NOTE:

The following installation notices and installation considerations should be read and understood before the motherboard is installed. All installation notices pertaining to the installation of the motherboard should be strictly adhered to. Failing to adhere to these precautions may lead to severe damage of the motherboard and injury to the person installing the motherboard.

4.2.1 Installation Notices

Before and during the installation of the 3308040, please **do** the following:

- **Read the user manual:**
 - The user manual provides a complete description of the 3308040, installation instructions and configuration options.
- **Wear an electrostatic discharge cuff (ESD):**
 - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- **Place the motherboard on an antistatic pad:**

- When installing or configuring the motherboard, place it on an antistatic pad. This helps to prevent potential ESD damage.
- **Turn off all power to the 3308040:**
 - When working with the motherboard, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the 3308040 **DO NOT:**

- remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- use the product before verifying all the cables and power connectors are properly connected.
- allow screws to come in contact with the PCB circuit, connector pins, or its components.

4.3 Unpacking



NOTE:

If any of the items listed below are missing when the 3308040 is unpacked, do not proceed with the installation and contact the 3308040 reseller or vendor.

4.3.1 Unpacking Precautions

Before installing the 3308040, unpack the motherboard. Some components on 3308040 are very sensitive to static electricity and can be damaged by a sudden rush of power. To protect it from being damaged, follow these precautions:

- The user should ground them self to remove any static charge before touching the 3308040. To do so wear a grounded wrist strap at all times or frequently touch any conducting materials that is connected to the ground.
 - Handle the 3308040 by its edges. Do not touch the IC chips, leads or circuitry if not necessary.
-

Do not place a PCB on top of an anti-static bag. Only the inside of the bag is safe from static discharge.

4.3.2 Checklist

When unpacking the 3308040, please make sure that the package contains the following items.

- 1x 3308040 single board computer
- 1 x IDE flat cable 40P/40P/40P
- 1 x 2.54 pitch KB/PS2 mouse cable
- 2 x SATA cable
- 1 x SATA power cable
- 1 x audio cable
- 1 x VGA cable
- 3 x 2.54 pitch RS-232 cables (without brackets)
- 1 x RS-232/422/485 cable (without bracket)
- 1x 2.54 pitch USB cable (without bracket)
- 1 x Mini jumper pack
- 1x Utility CD
- 1x Quick Installation Guide

If one or more of these items are missing, please contact the reseller or vendor the 3308040 was purchased from and do not proceed any further with the installation.

4.4 3308040 Motherboard Installation



WARNING!

1. Never run the motherboard without an appropriate heatsink and cooler that can be ordered from GAI or purchased separately.
 2. Be sure to use the CPU 12V power connector (CN10007) for the CPU power.
-



WARNING!

Please note that the installation instructions described in this manual should be carefully followed in order to avoid damage to the motherboard components and injury to the user.



WARNING!

When installing electronic components onto the motherboard always take the anti-static precautions listed above in order to prevent ESD damage to the motherboard and other electronic components like the CPU and DIMM modules

The following components must be installed onto the motherboard or connected to the motherboard during the installation process.



NOTE:

Some 3308040 models already have preinstalled CPUs. If the motherboard has a preinstalled CPU then the following section on CPU installation can be skipped.

- CPU
 - CPU cooling kit
 - DIMM modules
 - Peripheral device connection
-

4.4.1 CPU Installation



WARNING!

CPUs are expensive and sensitive components. When installing the CPU please be careful not to damage it in anyway. Make sure the CPU is installed properly and ensure that a heatsink and CPU cooling fan is properly installed before the motherboard is run or else both the CPU and the board may be damaged.

To install an Intel 479-pin CPU onto the motherboard, follow the steps below:

- Step 1:** Is the CPU retention screw in an unlocked position? When shipped, the retention screw of the CPU socket should be in the unlocked position. If it is not in the unlocked position, use a screwdriver to position it in an unlocked position. (See **Figure 4-1**)

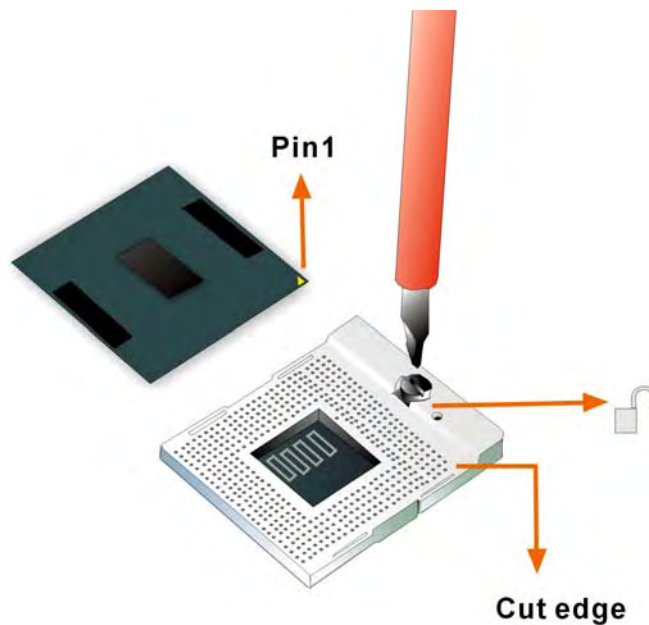


Figure 4-1: Make sure the CPU socket retention screw is unlocked

- Step 2:** Inspect the CPU socket. Make sure there are no bent pins and make sure the socket contacts are free of foreign material. If any debris is found, remove it with compressed air.

Step 3: Correctly position the CPU. Make sure the pin 1 mark matches the cut edge on the CPU socket. Carefully place the CPU on top of the socket. When properly placed, the CPU should be easily inserted into the socket.

Step 4: Insert the CPU. To insert the CPU into the socket, hold the CPU by its edges and follow the instructions below:

Correctly orientate the CPU with the IHS (Integrated Heat Sink) side facing upward.

- a. Locate the pin 1 mark on the CPU.
- b. Gently insert the CPU into the socket.
- c. Rotate the retention screw into the locked position. (See **Figure 4-2**)

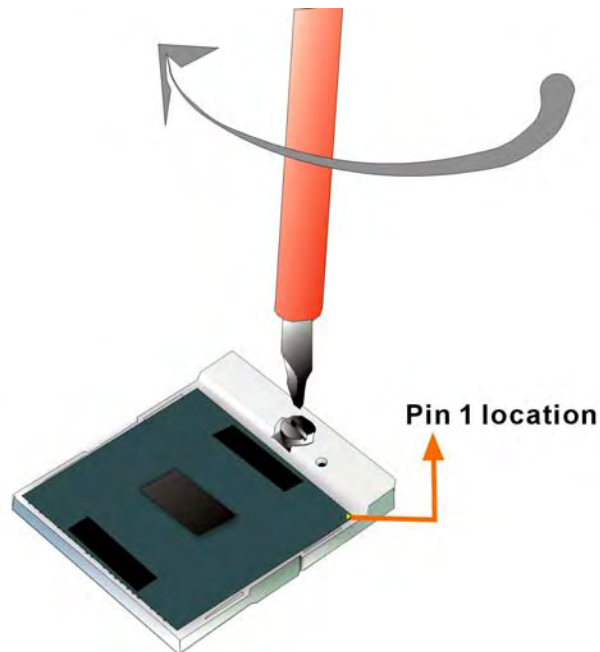


Figure 4-2: Lock the CPU Socket Retention Screw

4.4.2 Cooling Kit (2107703) Installation



Figure 4-3: GAI 2107703 Cooling Kit

GAI provides a cooling kit designed for socket 479 CPUs. (See **Figure 4-3**) The cooling kit is comprised of a CPU heat sink and a cooling fan.



NOTE:

The 2107703 heat sink comes with a sprayed layer of thermal paste. Make sure the paste is not accidentally wiped during the unpacking or installation of the heat sink. Thermal paste between the CPU and the heat sink is important for optimum heat dissipation.

To install the 2107703 cooling kit, please follow the steps below.

- Step 1: Place the cooling kit onto the CPU.** Make sure the CPU cable can be properly routed when the cooling kit is installed.
- Step 2: Properly align the cooling kit.** Make sure its four spring screw fasteners can pass through the pre-drilled holes on the PCB.
- Step 3: Secure the cooling kit.** From the solder side of the PCB, align the support bracket to the screw threads on heat sink that were inserted through the PCB holes. (See **Figure 4-4**)

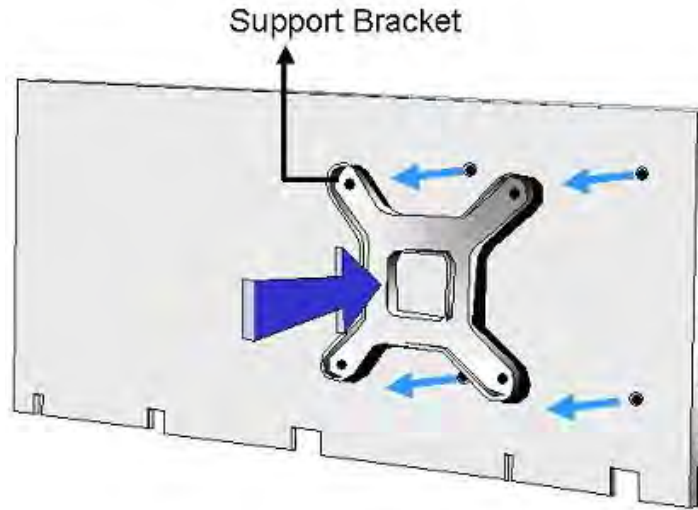


Figure 4-4: Cooling Kit Support Bracket

Step 4: **Tighten the screws.** Use a screwdriver to tighten the four screws. Tighten each nut a few turns at a time and do not over-tighten the screws.

Step 5: **Connect the fan cable.** Connect the cooling kit fan cable to the fan connector on the motherboard. Carefully route the cable and avoid heat generating chips and fan blades. (See **Figure 4-5**)

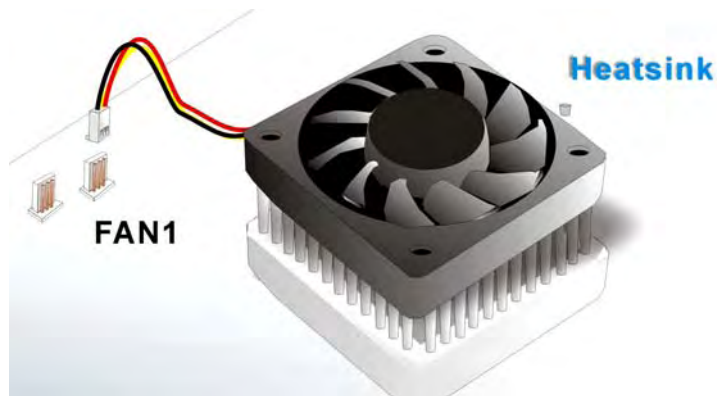


Figure 4-5: Connect the cooling fan cable

4.4.3 DIMM Module Installation

4.4.3.1 Purchasing the Memory Module

When purchasing DIMM modules, the following considerations should be taken into account:

- The DIMM module can support a memory chip with a maximum size of 1GB
- The DIMM module supports SDRAM DIMM speeds of 333MHz and 400MHz

4.4.3.2 DIMM Module Installation

The 3308040 motherboard has two DDR SDRAM DIMM sockets. To install the DIMM modules, follow the instructions below and refer to **Figure 4-6**.

Step 1: Pull the two white handles on either side of the DIMM socket down.

Step 2: Align the DIMM module with the DIMM socket making sure the matching pins are correctly aligned.

Step 3: Insert the DIMM module slowly. Once it is correctly inserted, push down firmly. The white handles on either side of the socket move back up and lock the module into the socket.

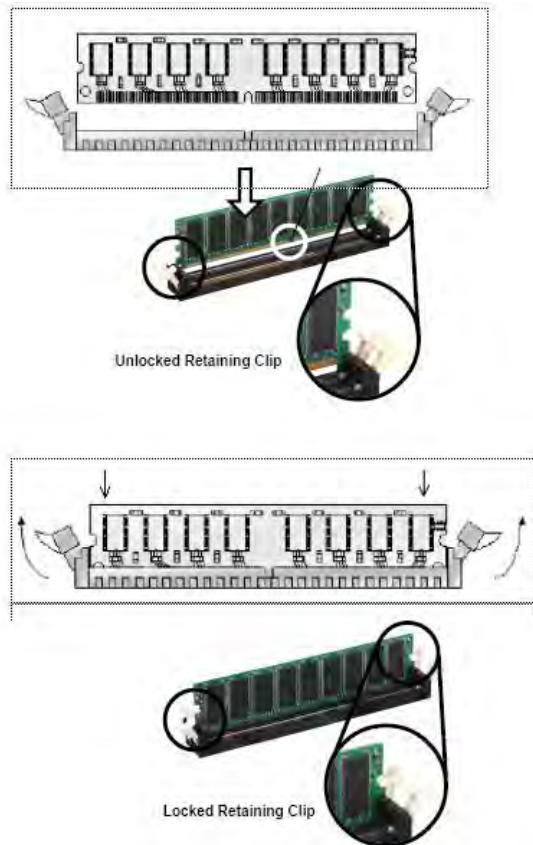


Figure 4-6: DIMM Module Installation

4.4.4 Peripheral Device Connection

Cables provided by GAI that connect peripheral devices to the motherboard are listed in **Table 4-1**. Cables not included in the kit must be separately purchased.

Quantity	Type
1	ATA 66/100 flat cable
2	SATA cables
1	SATA power cable
1	RS-232 cable
1	USB cable

Table 4-1: GAI Provided Cables

4.4.4.1 IDE Disk Drive Connector (IDE1)

The cable used to connect the motherboard to the IDE HDD is a standard 44-pin ATA 66/100 flat cable. To connect an IDE HDD to the motherboard, follow the instructions below.

- Step 1:** Find the ATA 66/100 flat cable in the kit that came with the motherboard.
- Step 2:** Connect one end of the cable to the PIDE1 connector on the motherboard. A keyed pin on the IDE connectors prevents it from being connected incorrectly.
- Step 3:** Locate the red wire on the other side of the cable that corresponds to the pin 1 connector.
- Step 4:** Connect the other side of the cable to the HDD making sure that the pin 1 cable corresponds to pin 1 on the connector.



NOTE:

When two EIDE disk drives are connected together, back-end jumpers on the drives must be used to configure one drive as a master and the other as a slave.

4.5 Chassis Installation

After the CPU, the cooling kit, and the DIMM modules have been installed and after the internal peripheral connectors have been connected to the peripheral devices and the jumpers have been configured, the motherboard can be mounted into chassis.

To mount the motherboard into a chassis please refer to the chassis user guide that came with the product.

4.6 Rear Panel Connectors

4.6.1 Ethernet Connection

The rear panel RJ-45 connectors can be connected to an external LAN and communicate with data transfer rates up to 1Gb/s.

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

A

Watchdog Timer

**NOTE:**

The following discussion applies to DOS environment. GAI support is contacted or the GAI website visited for specific drivers for more sophisticated operating systems, e.g., Windows and Linux.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMI or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer:

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table B-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. While the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the Watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

**NOTE:**

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

Example program:

```
; INITIAL TIMER PERIOD COUNTER
```

```
;
```

```
W_LOOP:
```

```
    MOV    AX, 6F02H    ;setting the time-out value
    MOV    BL, 30      ;time-out value is 48 seconds
    INT    15H
```

```
;
```

```
; ADD THE APPLICATION PROGRAM HERE
```

```
;
```

```
    CMP    EXIT_AP, 1    ;is the application over?
    JNE    W_LOOP    ;No, restart the application
```

```
    MOV    AX, 6F02H    ;disable Watchdog Timer
    MOV    BL, 0    ;
    INT    15H
```

```
;
```

```
; EXIT ;
```

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

B

Address Mapping

B.1 IO Address Map

I/O address Range	Description
000-01F	DMA Controller
020-021	Interrupt Controller
040-043	System time
060-06F	Keyboard Controller
070-07F	System CMOS/Real time Clock
080-09F	DMA Controller
0A0-0A1	Interrupt Controller
0C0-0DF	DMA Controller
0F0-0FF	Numeric data processor
1F0-1F7	Primary IDE Channel
2F8-2FF	Serial Port 2 (COM2)
378-37F	Parallel Printer Port 1 (LPT1)
3B0-3BB	SiS661CX Graphics Controller
3C0-3DF	SiS661CX Graphics Controller
3F6-3F6	Primary IDE Channel
3F7-3F7	Standard floppy disk controller
3F8-3FF	Serial Port 1 (COM1)

Table C-1: IO Address Map

B.2 1st MB Memory Address Map

Memory address	Description
00000-9FFFF	System memory
A0000-BFFFF	VGA buffer
F0000-FFFFF	System BIOS
1000000-	Extend BIOS

Table C-2: 1st MB Memory Address Map

B.3 IRQ Mapping Table

IRQ0	System Timer	IRQ8	RTC clock
IRQ1	Keyboard	IRQ9	ACPI
IRQ2	Available	IRQ10	LAN
IRQ3	COM2	IRQ11	LAN/USB2.0/SATA
IRQ4	COM1	IRQ12	PS/2 mouse
IRQ5	SMBus Controller	IRQ13	FPU
IRQ6	FDC	IRQ14	Primary IDE
IRQ7	Available	IRQ15	Secondary IDE

Table C-3: IRQ Mapping Table

B.4 DMA Channel Assignments

Channel	Function
0	Available
1	Available
2	Floppy disk (8-bit transfer)
3	Available
4	Cascade for DMA controller 1
5	Available
6	Available
7	Available

Table C-4: IRQ Mapping Table

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

C

External AC'97 Audio CODEC

C.1 Introduction

The motherboard comes with an onboard Realtek ALC655 CODEC. Realtek ALC655 is a 16-bit, full duplex AC'97 Rev. 2.3 compatible audio CODEC with a sampling rate of 48KHz.

C.1.1 Accessing the AC'97 CODEC

The CODEC is accessed through a connector on the 3308040 motherboard.
Connect the audio kit to the connector.

C.1.2 Driver Installation

The driver installation has been described in Chapter 6  tion 6.3 

After rebooting the sound effect configuration utility appears in the Windows Control Panel (see **Figure 6-20**). If the peripheral speakers are properly connected, sound effects should be heard.

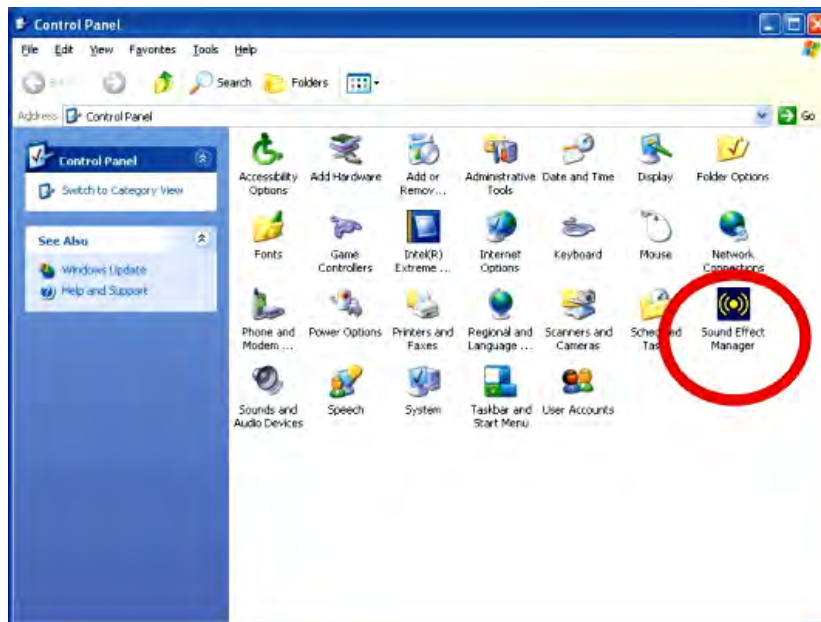


Figure 6-20: Sound Effect Manager con

C.2 Sound Effect Configuration

C.2.1 Accessing the Sound Effects Manager

To access the **Sound Effects Manager**, please do the following:

Step 6: Install the audio CODEC driver.

Step 7: Click either:

- The Sound Effect Manager icon in the Notification Area of the system task bar (see Figure 6-21), or
- The Sound Effect Manager icon in the Control Panel (Figure 6-22).

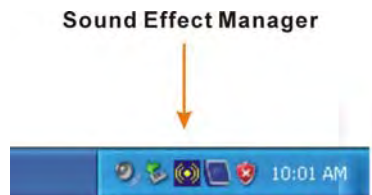


Figure 6-21: Sound Effect Manager Icon [Task Bar]

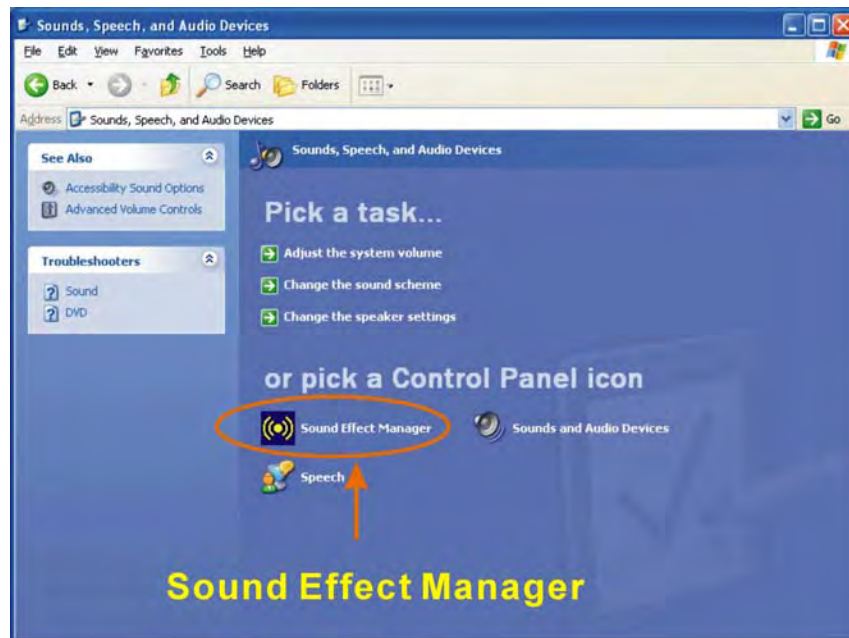


Figure 6-22: Sound Effect Manager Icon [Control Panel]

Step 8: The sound effect manager appears. (See Figure 6-23)

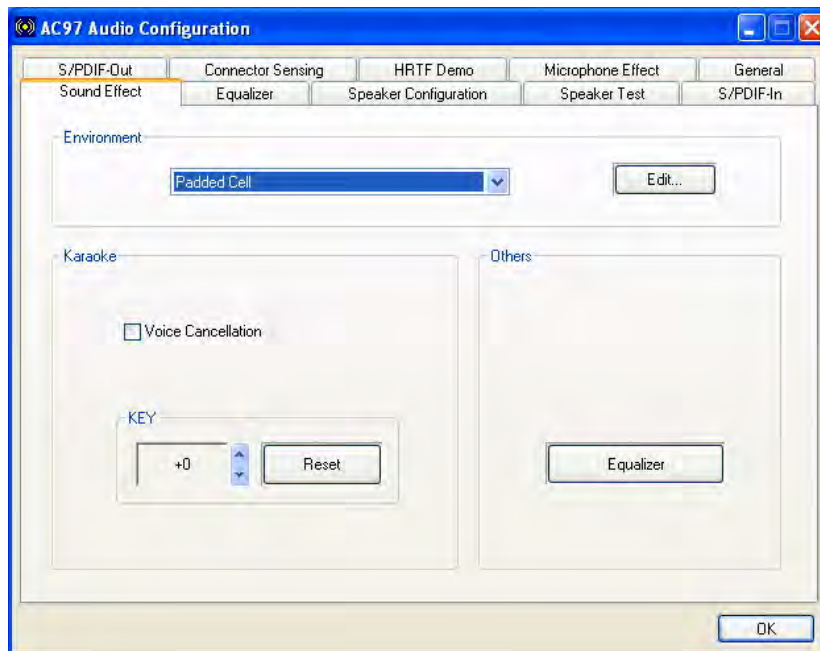


Figure 6-23: Sound Effects Manager (ALC655)



NOTE:

The Sound Effect Manager shown in **Figure 6-23** is for the RealTek ALC655 audio CODEC. Different CODECs may have different sound manager appearances.

The following section describes the different configuration options in the Sound Effect Manager.

C.2.2 Sound Effect Manager Configuration Options

The **Sound Effects Manager** enables configuration of the items listed below. To configure these items click the corresponding menu tab in the **Sound Effects Manager** in **Figure 6-23**.

**NOTE:**

The **Karaoke Mode** is configured in the **Sound Effect** menu. To access Karaoke configuration settings, click on the **Sound Effect** menu tab.

- Sound Effect
- Karaoke Mode
- Equalizer
- Speaker Configuration
- Speaker Test
- S/PDIF-In
- S/PDIF-Out
- Connector Sensing
- HRTF Demo
- Microphone Effect
- General

**NOTE:**

Not all RealTek **Sound Effect Managers** have all the above listed options. The Sound Effect Manager loaded onto the system may only have some of the options listed above.

Below is a brief description of the available configuration options in the **Sound Effects Manager**.

- **Sound Effect:**- Select a sound effect from the 23 listed options in the drop down menu. Selected sound effect properties can be edited. To edit the sound effect click “**EDIT**.”
- **Karaoke Mode:**- The **Karaoke Mode** is accessed in the Sound Effect window. The **Voice Cancellation** disables the vocal part of the music being played. The **Key adjustment** up or down arrow icons enables users to define a key

that fits a certain vocal range.

- **Equalizer Selection:**- Preset equalizer settings enable easy audio range settings. Ten frequency bands can be configured.

- **Speaker Configuration:**- Multi-channel speaker settings are configured in this menu. Configurable options include:
 - Headphone
 - Channel mode for stereo speaker output
 - Channel mode for 4 speaker output
 - Channel mode for 5.1 speaker output
 - Synchronize the phonejack switch with speakers settings

- **Speaker Test:**- Each speaker connected to the system is tested individually to see if the 4-channel or 6-channel audio operates properly.

- **S/PDIF-In & S/PDIF-Out:**- These functions are currently not supported.

- **Connector Sensing:**- Realtek ALC655 detects if an audio device is plugged into the wrong connector. If an incorrect device is plugged in a warning message appears.

- **HRTF Demo:**- Adjust HRTF (Head Related Transfer Functions) 3D positional audio here before running 3D applications.

- **Microphone Effect:**- Microphone noise suppression is enabled in this menu.

- **General:**- General information about the installed AC'97 audio configuration utility is listed here.

Appendix

D

RAID Setup

D.1 Introduction

The Silicon Image SATA RAID chipset can control parallel ATA (PATA) and serial ATA (SATA) disks.



CAUTION!

A configured RAID volume (which may consist of multiple hard drives) appears to an operating system as a contingent storage space. The operating system will not be able to distinguish the physical disk drives contained in a RAID configuration.

D.1.1 Precautions

One key benefit a RAID configuration brings is that a single hard drive can fail within a RAID array without damaging data. With RAID1 array, a failed drive can be replaced and the RAID configuration restored.



WARNING!

Irrecoverable data loss occurs if a working drive is removed when trying to remove a failed drive. It is strongly recommended to mark the physical connections of all SATA disk drives. Drive locations can be identified by attaching stickers to the drive bays. If a drive member of a RAID array should fail, the failed drive can then be correctly identified.



CAUTION!

Do not accidentally disconnect the SATA drive cables. Carefully route the cables within the chassis to avoid system down time.

D.2 Features and Benefits

- Supports RAID levels 0 and 1
- Supports connectivity to two disk drives
- Supported Operating Systems include: Windows 98/Me, Windows 2000 and Windows XP
- Windows-based software for RAID management

D.3 Installing the RAID Components

E.3.1 Install the Silicon Image RAID Host Adapter Driver

To access the **Silicon Image RAID Utility**, using a Windows Server 2003, XP, 2000, 98 or NT please follow the steps below:

**NOTE:**

If an alternative operating system is being used, please refer to the Silicon Image installation guidelines that can be accessed at <http://www.siliconimage.com/docs/SATARaid%20Manual%20v1.03.pdf>.

Step 1: Connect SATA drives to the system. Connect two SATA drives to the system. Make sure the drives have the same capacity, are the same type and have the same speed.

**NOTE:**

Make sure the SATA drives are EXACTLY the same when they are configured in a RAID configuration (RAID 0 or RAID 1). If they are not the same size, disk drive capacity is sacrificed and overall performance affected.

Step 2: When Windows detects the newly installed SATA host adapter, it will open a Driver Installation Wizard.

-
- Step 3:** Click on the Next buttons until the wizard prompts for the location of the driver.
 - Step 4:** Insert the Silicon Image SATA host adapter driver CD into the computer's CDROM drive and click on the Browse button.
 - Step 5:** Select the directory on the CD in which the driver resides and click OK.
 - Step 6:** Click the Next button. A window will be displayed to verify proper installation of the host adapter driver.
 - Step 7:** Click **Finish**.
 - Step 8:** When prompted to restart the computer, click **Yes**.

D.3.2 Install the JAVA 2 Runtime Environment

The Java 2 Runtime Environment is required for the SATA Raid GUI. To install the JAVA 2 Runtime Environment, please do the following:

- Step 1:** Download the Java 2 Runtime Installer and executable package from the Sun Microsystems website at <http://java.sun.com/j2se/downloads.html>. To do this the computer must have an Internet connection set up before installation can proceed.
- Step 2:** Save the installer file to a known location
- Step 3:** Select the installation file and open it. The installation begins and the installation program is downloaded from the internet.
- Step 4:** When asked to accept the license agreement, click **Next**.
- Step 5:** When the installation completes, click **Finish**.
- Step 6:** Restart the computer when prompted.

D.3.3 Install the RAID GUI

To install the Silicon Image RAID GUI, please follow the steps below.

- Step 1:** Insert the RAID installation CD into the CD-ROM drive.

- Step 2:** Display the contents of the CD-ROM.
- Step 3:** The SATARaid GUI Installation program is named Java SATARaid.exe. Select this file and open it. The installation begins.
- Step 4:** Click the Next button when the Welcome window appears.
- Step 5:** Click the Next button to install the GUI program in the default directory.
- Step 6:** Click the Finish button to complete the installation.

D.4 Setting RAID Options

Once the GUI is installed, use the GUI functions to configure the SATA RAID. For further information on installing the RAID functions, please download the Silicon Image RAID manual from <http://www.siliconimage.com/docs/SATARaid%20Manual%20v1.03.pdf>.

THIS PAGE IS INTENTIONALLY LEFT BLANK

Any advice or comments about our products and service, or anything we can help you with please don't hesitate to contact with us. We will do our best to support your products, projects and business.



Address: Global American, Inc.
17 Hampshire Drive
Hudson, NH 03051

Telephone: Toll Free (U.S. Only) 800-833-8999
(603)886-3900

FAX: (603)886-4545

Website: <http://www.globalamericaninc.com>

E-Mail: salesinfo@globalamericaninc.com
